

# OPERATING MANUAL

---

DOC. NO. 438.9213-75/01 EDITION 10.2007



**EX618cl – EX670cl**

**EXSM665cl – 680cl**

**SU620cl – 675cl**

**Clarus**

---

**Wascomat provides efficient washers, dryers, flatwork ironers and wetcleaning systems  
in a size and model for every laundry and wetcleaning need!**



**Wascomat** Laundry Equipment

516-371-4400 • [www.wascomat.com](http://www.wascomat.com)

FOR PARTS, SERVICE AND TECHNICAL ASSISTANCE CALL YOUR LOCAL WASCOMAT DEALER

# WASCOMAT CUSTOMER SUPPORT

Whether you need spare parts or technical advice to guide you to the source of a malfunction, our nationwide network of authorized dealers are able and ready to serve your needs, or call the Wascomat Customer Service Hotlines listed below.

## SPARE PARTS

# 516-371-2000

Before ordering parts, refer to the Wascomat spare parts manual (also available on [www.wascomat.com](http://www.wascomat.com)) to determine the part number(s) for the item(s) you need.

For quick service, please have the following information available:

1. Part Number of the item(s) you need.
2. Model of the machine.
3. Serial number of the machine.
4. Electrical data for the machine:
  - 120 or 208-240 Volt?
  - Single or three phase?
  - 50 or 60 Cycle?

To insure parts order accuracy, only fax or email parts orders are accepted:

- Fax: 516-371-4029
- email: [parts@wascomat.com](mailto:parts@wascomat.com)

## TECHNICAL SUPPORT

# 516-371-0700

For service information, first contact your local authorized Wascomat dealer.

Wascomat technical support can assist you or your technician to diagnose and repair your laundry machines over the phone. Please call from the location where the machines are installed (we suggest you use a cellular or cordless phone), and have the following information available:

1. Model of the machine.
2. Serial number of the machine.
3. Electrical data for the machine:
  - 120 or 208-240 Volt?
  - Single or three phase?
  - 50 or 60 Cycle?
4. An accurate description of the malfunction.

To expedite parts order shipment, please use your credit card.  
We accept: American Express, Mastercard, Visa, Discover, Diner's Club.

## WARRANTY CLAIMS

Wascomat's Technical Support staff will honor valid manufacturer's parts warranty claims providing your Wascomat machines are registered for warranty coverage upon installation. If they are not registered, you can validate your warranty claim by providing information about when and where you purchased the Wascomat machine(s), the model and serial number(s). Additional warranty proof may also be required.

461 Doughty Blvd., Inwood, N.Y. 11096-0338 | Sales and Administration - Tel: 516-371-4400 • Fax: 516-371-4204 • e-mail: [sales@wascomat.com](mailto:sales@wascomat.com)  
Spare Parts - Tel: 516-371-2000 • Fax: 516-371-4029 • e-mail: [parts@wascomat.com](mailto:parts@wascomat.com) | Technical Support - Tel: 516-371-0700 • Fax: 516-371-4029

En Mexico: Llame gratis a este numero 001-800-010-1010

# Operating manual

**EX618cl – EX670cl**

**SU620cl – 675cl**

**Clarus**

**WARNING:** ALL OPERATING AND MAINTENANCE PROCEDURES SHOWN ON THE NEXT PAGE OF THIS MANUAL MUST BE FOLLOWED DAILY FOR PROPER OPERATION OF YOUR WASCOMAT MACHINE.

PLEASE ENTER THE FOLLOWING INFORMATION AS IT APPEARS ON THE MACHINE(S) DATA PLATE(S).

<b>MACHINE TYPE OR MODEL</b>	
<b>MACHINE SERIAL NUMBER(S)</b>	
<b>ELECTRICAL CHARACTERISTICS:</b> _____ VOLTS, _____ PHASE, _____ HZ.	

MAKE CERTAIN TO KEEP THIS MANUAL IN A SECURE PLACE FOR FUTURE REFERENCE.



**Intentionally blank**



## SAFETY AND WARNINGS SIGNS

Replace If Missing Or Illegible

One or more of these signs must be affixed on each machine as indicated, when not included as part of the front instruction panel.

### LOCATED ON THE OPERATING INSTRUCTION SIGN OF THE MACHINE:

#### CAUTION

1. Do not open washer door until cycle is completed, operating light is off, and wash cylinder has stopped rotating.
2. Do not tamper with the door safety switch or door lock.
3. Do not attempt to open door or place hands into washer to remove or add clothes during operation. This can cause serious injury.

#### PRECAUCION

1. No abra la puerta de la máquina lavadora sino hasta que la máquina haya terminado su ciclo, la luz operativa esté apagada y el cilindro de lavado haya completamente terminado de girar.
2. No interfiere o manipule el switch o la cerradura de la puerta.
3. No trate de abrir la puerta o meta las manos dentro de la máquina para meter o sacar ropa mientras la máquina está en operación, pues puede resultar seriamente herido.

**MACHINE MUST NOT BE USED BY CHILDREN**

**LAS MÁQUINAS NO DEBEN SER USADAS POR NIÑOS**

### LOCATED AT THE REAR OF THE MACHINE:

## INSTALLATION AND

## MAINTENANCE WARNINGS – AVERTISSEMENT

1. This machine **MUST** be securely bolted according to the installation instructions, to reduce the risk of fire and to prevent serious injury, or damage to the machine.  
*Pour réduire les risques d'incendie, fixer cet appareil sur un plancher beton sans revêtement.*
2. If installed on a floor of combustible material, the floor area below this machine must be covered by a metal sheet extending to the outer edges of the machine.
3. This machine **MUST** be connected to a dedicated electrical circuit to which no other lightning unit or general purpose receptacle is connected. Use copper conductor only.  
*Utiliser seulement des conducteurs en cuivre.*
4. This machine **MUST** be serviced and operated in compliance with manufacturer's instructions. **CHECK DOOR LOCK EVERY DAY FOR PROPER OPERATION TO PREVENT INJURY OR DAMAGE. IF THE DOOR LOCK FAILS TO OPERATE PROPERLY, PLACE THE MACHINE OUT OF ORDER UNTIL THE PROBLEM IS CORRECTED.**
5. Disconnect power prior to servicing of machine.  
*Deconnecter cet appareil del'alimentation avant de proceder a l'entretien.*
6. To remove top panel, first remove screws at the rear. When remounting the top, reinstall them. To remove the top panel on models on which it is secured by one or two keylocks, use the keys provided in the drum package. Be certain to relock after remounting the top panel.

MANUFACTURED BY WASCATOR  
DISTRIBUTED BY WASCOMAT, INWOOD, NEW YORK, USA

471 766202-04

### LOCATED ON THE DOOR:

If you need to order more safety or warning signs, call Wascomat's parts department at 516-371-2000, or call your local dealer.



471 467148-01



## **NOTICE TO: OWNERS, OPERATORS AND DEALERS OF WASCOMAT MACHINES**

IMPROPER INSTALLATION AND INADEQUATE MAINTENANCE, POOR HOUSEKEEPING AND WILLFUL NEGLIGENCE OR BYPASSING OF SAFETY DEVICES MAY RESULT IN SERIOUS ACCIDENTS OR INJURY. TO ASSURE THE SAFETY OF CUSTOMERS AND/OR OPERATORS OF YOUR MACHINE, THE FOLLOWING MAINTENANCE CHECKS MUST BE PERFORMED ON A DAILY BASIS.

1. Prior to operation of the machine, check to make certain that all operating instructions and warning signs are affixed to the machine and legible. (See the following page of this manual for description and location of the signs.) Missing or illegible ones must be replaced immediately. Be sure you have spare signs and labels available at all times. These can be obtained from your dealer or Wascomat.

2. Check the door safety interlock, as follows:

- (a) OPEN THE DOOR of the machine and attempt to start in the normal manner:

For CLARUS microprocessor models, choose a program and press the START button.

### **THE MACHINE(S) MUST NOT START !**

- (b) CLOSE THE DOOR to start machine operation and, while it is operating, attempt to open the door without exerting extreme force on the door handle. The door should remain locked!

If the machine can start with the door open, or can continue to operate with the door unlocked, the door interlock is no longer operating properly. The machine must be placed out of order and the interlock immediately repaired or replaced. (See the door interlock section of the manual.)

3. DO NOT UNDER ANY CIRCUMSTANCES ATTEMPT TO BYPASS OR REWIRE ANY OF THE MACHINE'S SAFETY DEVICES, AS THIS CAN RESULT IN SERIOUS ACCIDENTS.
4. **Be sure to keep the machine(s) in proper working order:** Follow all maintenance and safety procedures. Further information regarding machine safety, service and parts can be obtained from your dealer or from Wascomat through its Technical Support Department - 516/371-0700.

All requests for assistance must include the model, serial number and electrical characteristics as they appear on the machine identification plate. Insert this information in the space provided on the previous page of this manual.

5. **WARNING:** DO NOT OPERATE MACHINE(S) WITH SAFETY DEVICES BYPASSED, REWIRED OR INOPERATIVE! DO NOT OPEN MACHINE DOOR UNTIL DRUM HAS STOPPED ROTATING!

# Contents

---

## Contents

Procedure for use.....	11
General introduction.....	11
Preparations .....	12
The "Move back" key .....	13
To start the wash program.....	13
To start a wash program from the program library.....	17
To change parameters in the current program step.....	20
Rapid advance.....	21
Show weight.....	23
No water reduction.....	24
Pause.....	25
Manual operation during a program.....	26
Text .....	32
To change the wash program after program operation has commenced.....	33
To change temperature.....	34
Auto restart.....	35
Manual operation .....	36
To select manual operation .....	36
Motor/door .....	37
Water/drain .....	38
Heating .....	39
Detergent signals and water flushing .....	40
Statistics .....	41
To select statistics .....	41
Resetting statistic registers .....	43
Memory card.....	59
General indtroduction.....	59
To select the "Memory card" function .....	60
To run a wash program straight from a memory card .....	63
To copy a program from a memory card to the machine's program control unit.....	64
To copy a program from the program control unit to a memory card...	67
To delete a program on a memory card .....	70
To delete all programs on a memory card.....	71
Maintenance.....	72
Preventive maintenance.....	73

**Intentionally blank**



# Safety



## Safety



**This machine can only be used with water. Never use dry cleaning agents.**


**Do not allow children to operate the machine.**

**Do not hose down or spray the machine with water.**

**Mechanical and electrical installation must be carried out by qualified personnel.**


**The machine's door lock must not be bypassed and it should be checked daily to ensure it functions.**

**Should the machine malfunction, turn off electrical power, mark the machine "out of order", and contact your local authorized Wascomat dealer.**

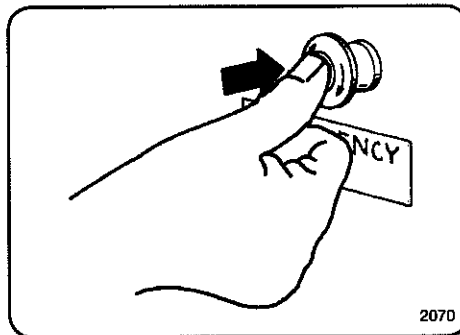

### Emergency stop


Some models are equipped with an emergency stop button. Press it to turn off power to the drive motor and control circuits. Note that this switch **DOES NOT** completely disconnect power from the washer, and that some circuits may still be energized. Use appropriate caution.

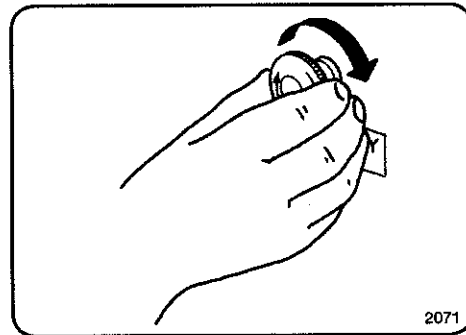

When necessary measures have been taken, the emergency button can be reset by turning the button clockwise until it is released.

The manufacturer reserves the right to make changes to design and component specifications.


**Intentionally blank**

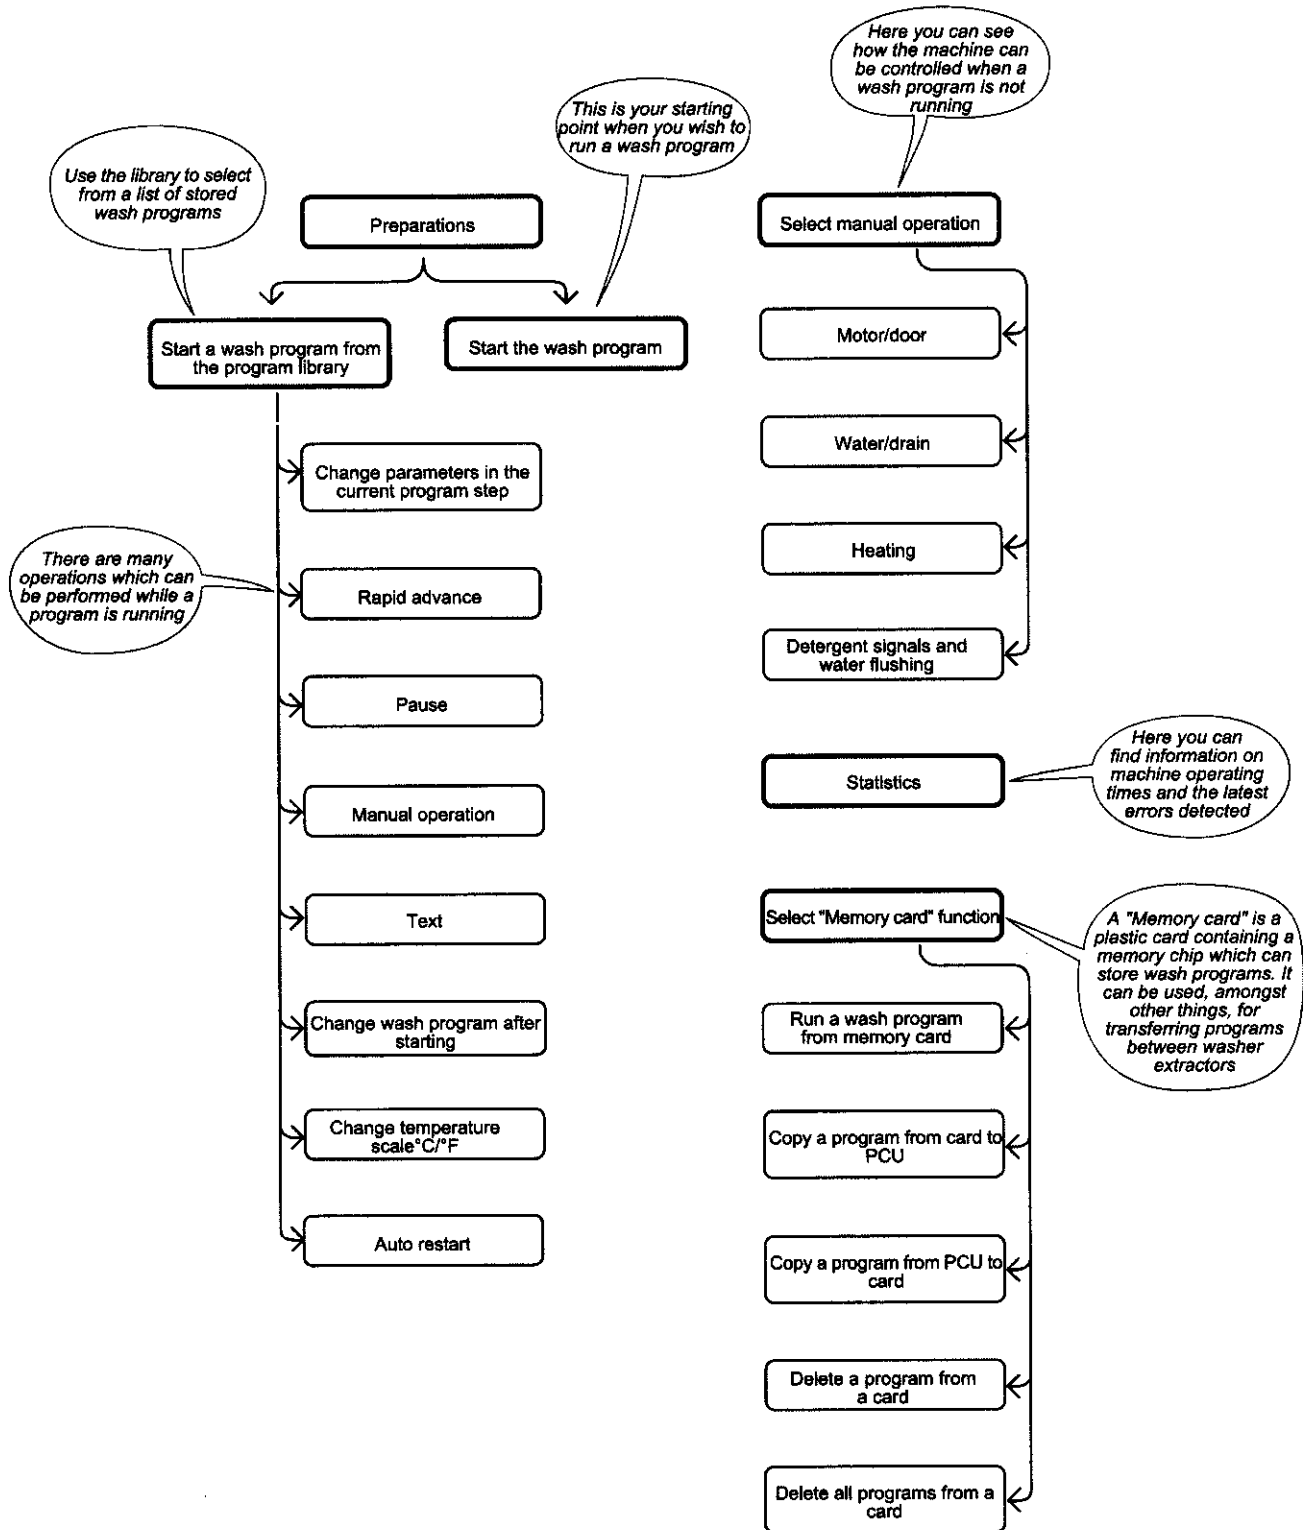

**Intentionally blank**


## General introduction

- ① This washer extractor is controlled by a microprocessor-based program control unit. There are many advantages to this equipment, including:
- timing, levels, motor speeds and temperatures are controlled with great precision and flexibility
  - detailed information on wash programs, machine status and operations, wash times and temperatures can be accessed in plain language on the large display screen
  - it is possible for the user to create new wash programs, and to customize programs based on experience to suit various types of textile, degrees of soiling etc.
  - a very high level of machine safety through continuous monitoring and built-in safety interlocks
  - the program control unit has a reader for "memory cards". These are cards the size of a credit card which contain a memory chip. Memory cards allow the user to:
    - transfer wash programs between a PC and the washer , or from one washer to another
    - run programs straight from a card
  - great flexibility during program operation:
    - rapid advance both forwards and backwards in the program
    - change temperatures, program module lengths and extraction speeds directly, during program operation
    - start a different program at any time during program operation.

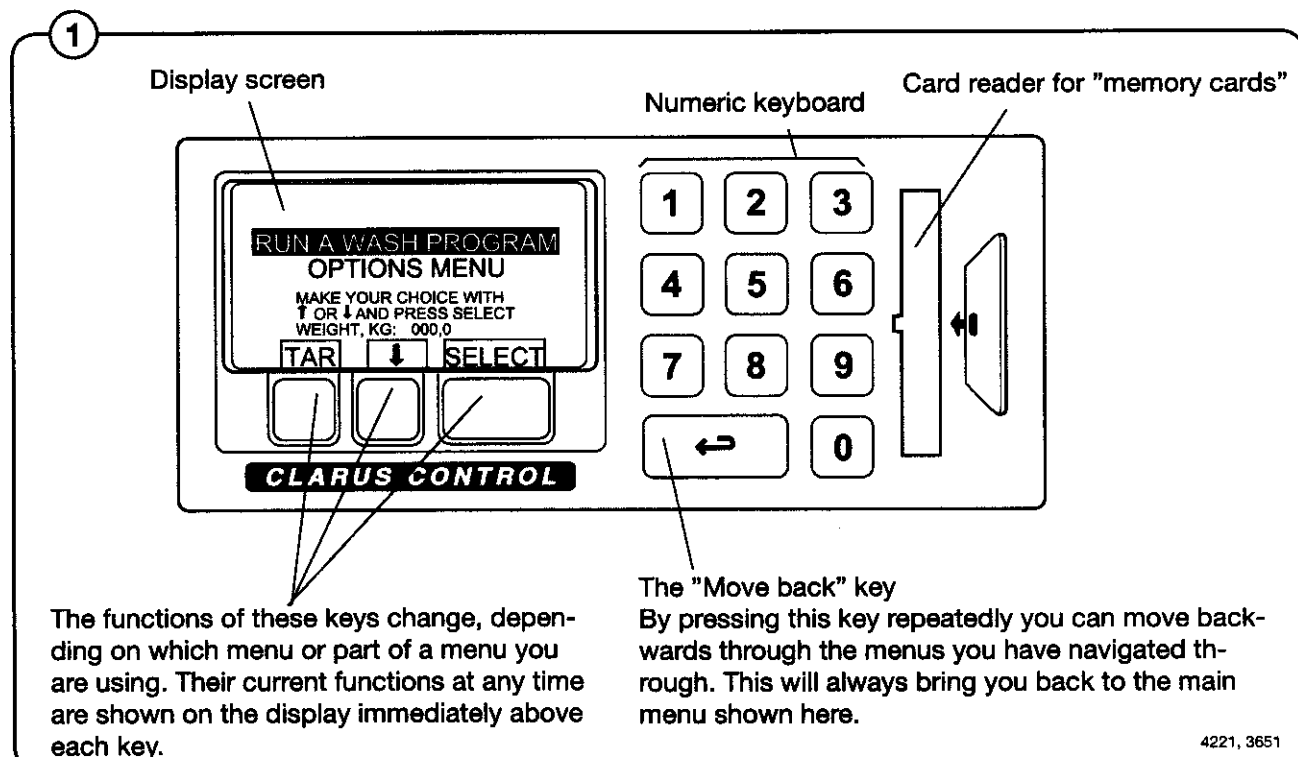

**Preparations**

- Sort the load, paying attention to the textile care labels on the items. Empty all pockets and close any zippers.
- Open the machine door, check that the drum is empty, load the items into the machine and close the door.
- Check that the emergency stop button has not been pressed (see "Machine safety").

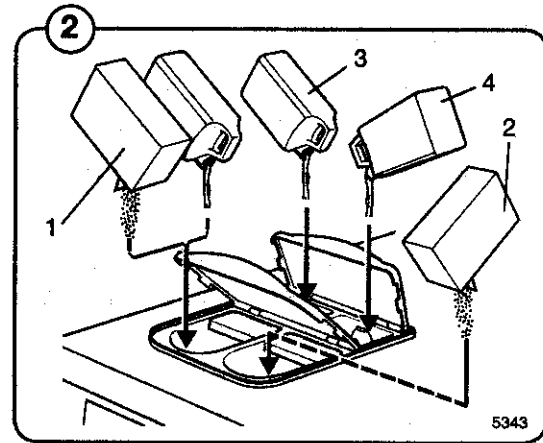**Measuring the detergent**

- ② **Compartment 1** – pre wash, powder or liquid detergent
- Compartment 2** – main wash, powder detergent
- Compartment 3** – softener
- Compartment 4** – main wash, liquid detergent

**The "Move back" key**




3627

If you find you are in the wrong place, or if you want to undo earlier key presses:

**Press the "Move back" key one or more times.**


**The "Move back" function**

Each press of the "Move back" key moves you back one menu, in reverse order. By pressing this key repeatedly you can return to this menu at any time:

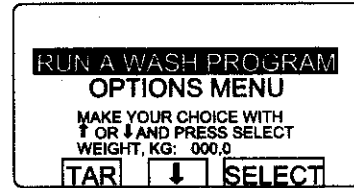

3651

**To start the wash program**

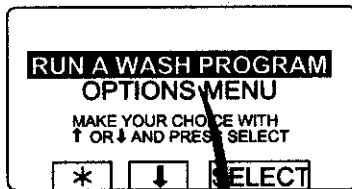

3580

If this menu is not currently displayed:

Press  repeatedly.



If "OPTIONS MENU" is highlighted:



Press .



When "RUN A WASH PROGRAM" is highlighted:



Press **SELECT**.

**Two ways of starting a program**

**By entering the actual program number**

Enter the actual program number if you know it, then press **SELECT**.

**By starting from the program library**

(see section "To start a wash program from the program library")

If you are unsure about the programs available, you can select a program from the program library, where the programs are listed with their descriptions.

## Procedure for use

RUN A WASH PROGRAM  
ENTER A PROGRAM NUMBER:  
**101**  
SELECT FROM LIBRARY:  
CLS SMC 993

3581 A

Here you can select programs from the program libraries. See the section entitled "To start a wash program from the program library".

Displayed here will be the number of the most frequently used program. S993 would indicate the number of a program on a memory card.

Press this key if you want to select this program.

for example: **991**

**SELECT**

Use the numeric keys to enter the program number. Press SELECT.

### ***If you have entered the wrong number***

Enter the correct number to overstrike the earlier one.

**Note:** you must always enter three digits, even when the number is really only a one or two-digit number.

Examples:

The program number required is 9. Enter **009** to overstrike all digits in the wrong number.

The program number required is 19. Enter **019** to overstrike all digits in the wrong number.

RUN A WASH PROGRAM  
ENTER A PROGRAM NUMBER:  
**101**  
FROM CLS OR SMC?  
CLS SMC OK

4031 A

If you have a memory card in the program control unit, and the program you selected is both on the memory card and in the PCU, you will be asked "FROM CLS OR SMC?".

**CLS**

Press CLS if you want to take the program from the PCU.

**SMC**

Press SMC if you want to take the program from the memory card.

In some of the text shown on the display, Clarus Control is referred to as CLS and the memory card is referred to as SMC.


### ***Memory cards***

A memory card is a plastic card, the size of a credit card, with an electronic memory chip inside it. This card is capable of storing 10 to 15 wash programs of normal size. If the programs are mostly small ones, more of them can be stored, whereas larger programs will reduce the number which can be held by the card. Memory cards of this type can be used to:

- transfer wash programs from one washer extractor to another
- run wash programs straight from the card
- transfer wash programs from a PC to a memory card and from a memory card to a PC (these procedures, and how to write a wash program on a PC, are described elsewhere).

Memory cards are described in detail in the section entitled "The Memory card".



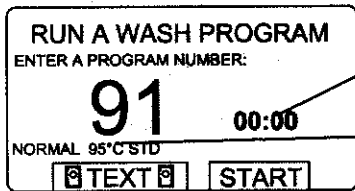

3582

Delayed start time (hrs:  
mins)

Program name

If you want to see the de-  
scription of the program:



Press **TEXT**.

**Pressing "Text" displays more information**  
The text displayed is a description of the wash program selected. This text description is inserted when a new wash program is created. This procedure is described fully in the programming manual.

Choose 1 or 2:

①



1 To start the program now:  
Press **START**.

②




2 **Delayed start**  
Use the numeric keys to enter a time (max. 99 hrs). This parameter appears on the right of the display.

**Delayed start**  
Delayed start means that the machine will not start the wash program until the time entered has elapsed.  
This function allows you, for example, to load the machine in the evening, but delay the start of the wash until early the next morning, to end in time for the next shift.



Press **START**.

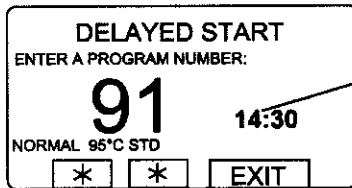

Time left before the  
machine is to start

If you want to cancel the  
delayed start:  
Press **EXIT**




3627

During a wash program:  
Press **↔** to  
**make the machine pause  
during the wash program.**

**Two ways of pausing during a wash program**  
There are two ways of pausing during a wash program:  
1 By pressing **↔**.  
2 As an additional function. This is described in section "Pause".

# Procedure for use

The following information is displayed during the wash program:

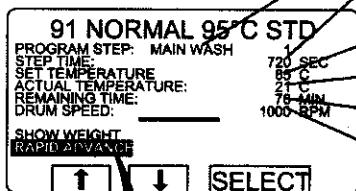

- Current program step
- Time left for this program step
- Set temperature
- Actual temperature
- Remaining program time
- Drum speed


**To terminate a program before it has finished**

- Select RAPID ADVANCE and press SELECT. Advance to "END OF PROGRAM" and press SELECT.
- Wait until "THE DOOR IS OPEN" appears on the display.
- Now the door can be opened.

**To change parameters in the current program step**

See section "To change parameters in the current program step".

Certain program step parameters can be altered during the course of the program. In the example (left), the length of the program step and the heating temperature can be altered.

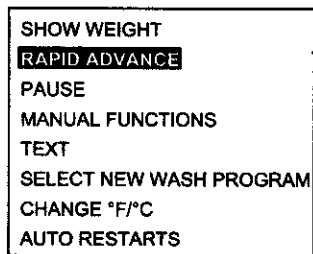

If required:  
Select a function using the cursor keys.




Press SELECT.

**Additional functions during the program**

**Rapid advance (see section "To change parameters in the current program step")**  
Rapid advance through the program to the program step required. Rapid advance can be used to move both forwards and backwards through the program.

**Display weight (see section "Display weight")**  
The actual load weight is shown in large digits on the display (weight display mode). (On machines with weighing equipment only.)

**No water level reduction (see section "No water level reduction")**  
Machines with weighing equipment installed adjust the water level automatically according to the load weight. This function lets you switch off water level reduction during the current program.

**Pause (see section "Pause")**  
The machine stops. The drain valve remains closed. Another way to pause the program: Press .

**Manual functions (see section "Manual operation during a program")**  
The following functions can be controlled manually during the course of the program:

- all water valves, drain and pumps (where applicable).
- limit highest extraction speed.
- motor on/off after end of wash program.
- flush detergent.


**Text (see section "Text")**  
Display description of wash program (if available).

**Select a different wash program (see section "To change the wash program after program operation has commenced")**  
You can switch to using a different wash program at any stage during the wash. Once this function has been selected, the current step (for example, rinse) of the earlier program will be allowed to finish and then the new program will start (from the beginning).

**Change temperature scale °C or °F (see section "To change temperature scale °C/°F")**

**Auto restart (see section "Auto restart")**  
Here you enter the number of times you wish the wash program to restart automatically.

**To start a wash program from the program library**

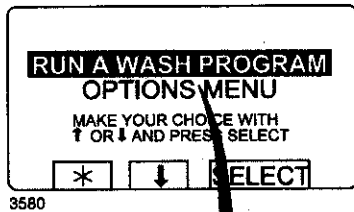

If this menu is not currently displayed:  
 Press repeatedly.



If "GO TO THE MENU" is highlighted:  
 Press .



When "RUN A WASH PROGRAM" is highlighted:  
 Press **SELECT**.




**What is the program library?**

The program library lists all wash programs, both user and standard programs, showing their program numbers and a description, for example:

1	MY OWN 40 °C
2	MY OWN 60 °C
3	MY OWN 90 °C
991	NORMAL 95°C STD
992	NORMAL 60°C STD
993	NORMAL 40°C STD
994	INTENSIVE 95°C
995	INTENSIVE 60°C
996	PERM. PRESS 60°C
997	PERM. PRESS 40°C
998	LOW EXTRACT 1 MIN
999	HIGH EXTRACT 5 MIN

Each time a new program is stored in the machine program memory, its number and description will be inserted automatically into the program library. The program library may be used for starting a wash program, but is also used in programming, when a wash program needs to be modified or if a new program is to be created on the basis of an existing one.

# Procedure for use

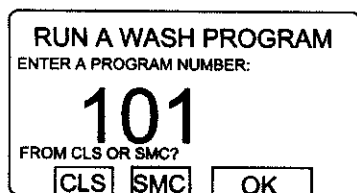

4031 A



To select a program from the PCU program library:

**Press CLS.**


If there is a memory card in the PCU and you wish to select a program on that:

**Press SMC.**

**Select library via menu**

You can also select the program library via the option "GO TO THE MENU". Then select "WASH PROGRAM LIBRARY".

3590

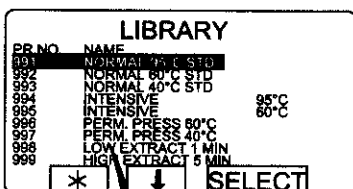

3591




991	NORMAL 95°C STD
992	NORMAL 60°C STD
993	NORMAL 40°C STD
994	INTENSIVE 95°C
995	INTENSIVE 60°C
996	PERM. PRESS 60°C
997	PERM. PRESS 40°C
998	LOW EXTRACT 1 MIN
999	LOW EXTRACT 5 MIN

Press the required number of times...

...to highlight the wash program required.



**Press SELECT.**

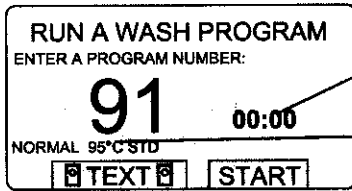

3582

Delayed start time (hrs: mins)

Program name

If you want to see the description of the program:

Press **TEXT**



**Pressing "Text" displays more information**  
The text displayed is a description of the wash program selected. This text description is inserted when a new wash program is created. This procedure is described fully in the programming manual.

Choose 1 or 2:

①



1 To start the program now:

Press **START**.

②




2 **Delayed start**

Use the numeric keys to enter a time (max. 99 hrs). This parameter appears on the right of the display.

**Delayed start**  
Delayed start means that the machine will not start the wash program until the time entered has elapsed.  
This function allows you, for example, to load the machine in the evening, but delay the start of the wash until early the next morning, to end in time for the next shift.



Press **START**.

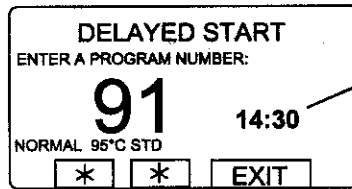

Time (in hours and minutes) left before the machine is to start.


If you want to cancel the delayed start:  
Press **EXIT**.



The functions which are available during program operation are described in sections "To change parameters in the current program step - Auto restart".

# Procedure for use

## To change parameters in the current program step

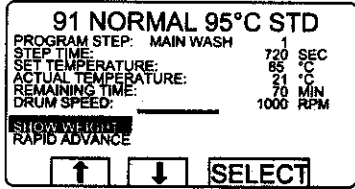

3584

During program operation the display will look like this (see section "To start the wash program").


**You can alter the following program steps:**

**Prewash, Main wash, Rinse, Drain, Soak**  
Length of program step (max. 9998 seconds), heating temperature (max. 97°C).

**Extraction**  
Length of program step (max. 3599seconds), extraction speed.




Press  one or more times...

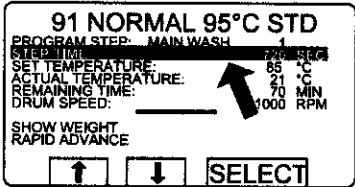

...to highlight the line required.



Press SELECT.

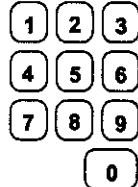

Use the numeric keys to enter the new parameter.



Press SELECT.

**If you have entered the wrong parameter**


Continue pressing numeric keys to overstrike the incorrect parameter.

**Note:** always use the same number of digits as used on the display to overstrike the incorrect parameter.


Example:

To change the time for the program step to 30 seconds, enter 030 to overstrike the earlier parameter.

## Rapid advance

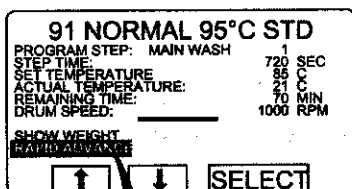

3583

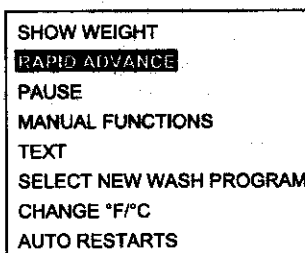

During program operation the display will look like this (see section "To start the wash program").


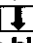
Check that "RAPID ADVANCE" is highlighted.

- To terminate a program before it has finished**
- Select RAPID ADVANCE and press SELECT. Advance to "END OF PROGRAM" and press SELECT.
  - Wait until "THE DOOR IS UNLOCKED" appears on the display.
  - Now the door can be opened.



If it is not highlighted:



Press  or  one or more times to highlight "RAPID ADVANCE".



Press SELECT.

# Procedure for use

91 NORMAL 95°C STD

 
RAPID ADVANCE

PRE WASH	1
EXTRACT	1
MAIN WASH	2
EXTRACT	2
RINSE	1

↑ ↓ SELECT

3586

PRE WASH	1
EXTRACT	1
MAIN WASH	1
EXTRACT	2
RINSE	1
EXTRACT	3
RINSE	2
EXTRACT	4
RINSE	3
EXTRACT	5
END OF PROGRAM	



Press **↓** or **↑** one or more times to highlight the program step you wish to advance to.

**SELECT**

Press SELECT.

**Rapid advance works in both directions**

Rapid advance works in both directions, using **↓** and **↑**.  
Using rapid advance to move forwards allows you to skip one or more program steps. Using rapid advance backwards allows you to repeat one or more program steps.


**Automatic return to normal display**

Once you have selected any of the functions below, you must make any changes required within 20 seconds. If no further keys are pressed within 20 seconds, the display will revert automatically to its normal appearance during a wash program.




For machines with weighing equipment installed only!

## Show weight

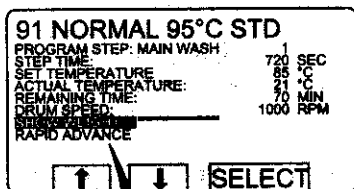

4774

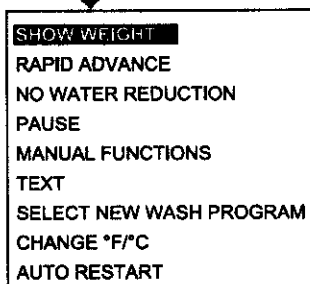



During program operation the display will look like this (see section "To start the wash program").

### Show weight

The actual weight is shown in large digits on the display (weight display mode).


If the weighing equipment is not connected, the error message "FUNCTION NOT ALLOWED" will appear. See the section "Fault-finding, weighing equipment" in the machine manual.



Press  or  one or more times to highlight "SHOW WEIGHT".



Press SELECT.

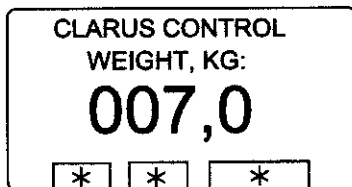

4775


Weight display mode:

The actual net weight is shown in large digits on the display.

### Return to normal display

The display will return to normal at the end of the "time for weight display" set as a parameter in Settings 1. The manufacturer's default parameter is 20 seconds.

### To end weight display sooner

Press  or use the numeric keys to enter a new program number.

## Procedure for use

For machines with weighing equipment installed only!

### No water reduction

91 NORMAL 95°C STD  
 PROGRAM STEP: MAIN WASH  
 STEP TIME: 720 SEC  
 SET TEMPERATURE: 85 °C  
 ACTUAL TEMPERATURE: 21 °C  
 REMAINING TIME: 70 MIN  
 DRUM SPEED: 1000 RPM  
 SHOW WEIGHT  
 RAPID ADVANCE

↑ ↓ SELECT

4776

SHOW WEIGHT  
 RAPID ADVANCE  
**NO WATER REDUCTION**  
 PAUSE  
 MANUAL FUNCTIONS  
 TEXT  
 SELECT NEW WASH PROGRAM  
 CHANGE °F/°C  
 AUTO RESTART

During program operation the display will look like this (see section "To start the wash program").

#### No water reduction

The wash load is weighed during the program and the water level is adjusted automatically according to its weight. If the load is not a full one, the water level will be reduced according to a water level reduction table. You can switch off water level reduction at any stage of a program.

Note that if you select "NO WATER REDUCTION", this applies only to the program currently running. The next time a program is started, water level reduction will occur automatically again.




Press ↑ or ↓ one or more times to highlight "NO WATER REDUCTION".




SELECT

Press SELECT.

**Pause**

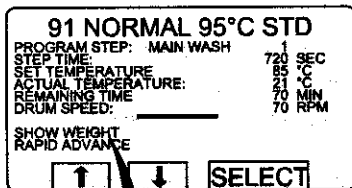

3587

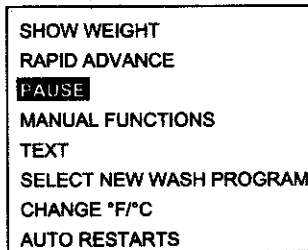


During program operation the display will look like this (see section "To start the wash program").



**Two ways of pausing during a wash program**

Note that you must be in normal wash mode to be able to pause in this way. If, for example, you are using "Manual Functions", you will have to exit that first before you can use Pause.

There are two ways of pausing during a wash program:

- 1 As an additional function. This is described in this section.
- 2 By pressing .




Press  or  one or more times to highlight "PAUSE".



Press SELECT.

**When the machine pauses:**

- Program operation is halted.
- Filling is halted (where applicable).
- Heating is halted (where applicable).
- The motor stops.
- The drain valve remains closed.
- The door cannot be opened.

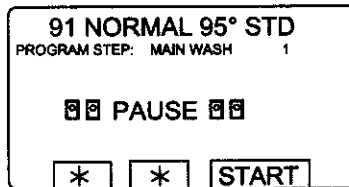

3588



Press START to restart the wash program.

## Procedure for use

### Manual operation during a program

91 NORMAL 95°C STD  
 PROGRAM STEP: MAIN WASH 1  
 STEP TIME: 720 SEC  
 SET TEMPERATURE: 85 C  
 ACTUAL TEMPERATURE: 21 C  
 REMAINING TIME: 70 MIN  
 DRUM SPEED: 1000 RPM  
 SHOW WEIGHT  
 RAPID ADVANCE

↑ ↓ SELECT

3585

SHOW WEIGHT  
 RAPID ADVANCE  
 PAUSE  
 MANUAL FUNCTIONS  
 TEXT  
 SELECT NEW WASH PROGRAM  
 CHANGE °F/°C  
 AUTO RESTARTS

During program operation the display will look like this (see section "To start the wash program").

#### Two types of manual operation

There are two types of manual operation, which should not be confused:

- **Manual operation during a program**  
 These functions are described in this section.
- **Manual operation when no program is running**  
 These functions are described in section "Manual operation".




Press ↑ or ↓ one or more times to highlight "MANUAL FUNCTIONS".




SELECT

Press SELECT.

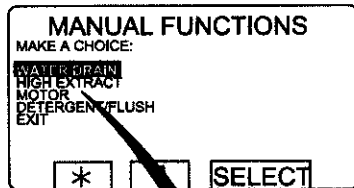

3679

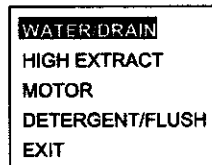

Use the cursor keys to select the function.



Press SELECT.

### Automatic return to normal display

Once you have selected any of the functions below, you must make any changes required within 20 seconds. If no further keys are pressed within 20 seconds, the display will revert automatically to its normal appearance during a wash program.

### Manual functions during a wash program

#### Water/drain (see section "Water/drain")

Allows manual operation of all water valves and the drain valve.

#### Highest extraction speed (see section "Maximum extraction speed")

Here you can limit the maximum extraction speed for the current program.

#### Motor (see section "Motor on after wash")


Motor on/off after program has ended.

#### Detergent valves (see section "Detergent signals and water flushing")

Allows you to control all valves in the detergent compartment or in external detergent supply system.

# Procedure for use

## Water/drain

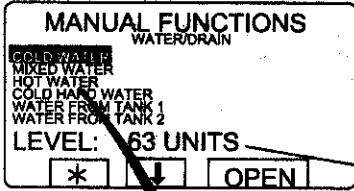


To access this function, see instructions in section "Manual operation".

Water level in drum


3680




Use  and  to select the water/drain option you require.

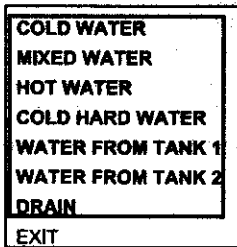

Press OPEN. The function will be activated for as long as you press and hold this key. The function ceases as soon as you release the key.

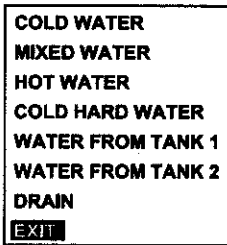


When you have finished: Press  repeatedly to highlight "EXIT".



Press SELECT.


## Maximum extraction speed

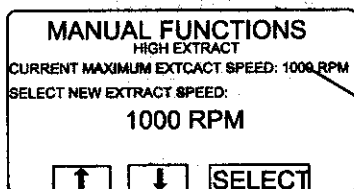

3681

To access this function, see instructions in section "Manual operation".

Maximum extraction speed in current program.

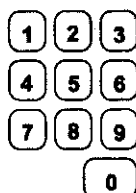

Enter the maximum extraction speed you require for this program.




Press SELECT.

### To limit the program's highest extraction speed

This function allows you to modify the highest extraction speed allowed during the program.

Example:

Assume that the highest speed in the program is 1000 rpm and that you have set 700 rpm as the highest speed allowed.

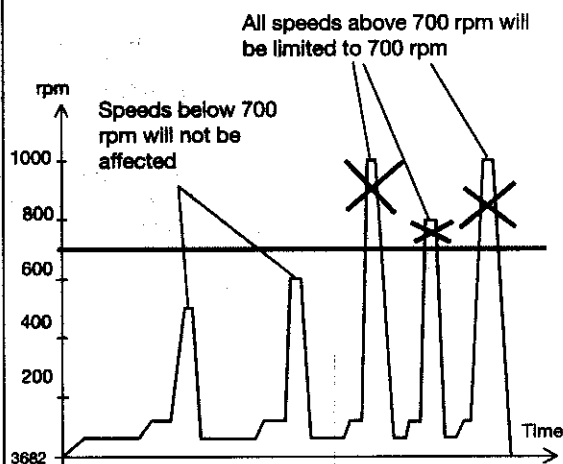


This change will affect the current program only. No change will be implemented if extraction is taking place at the time of the (attempted) change. The next time that this program is used, the original maximum speed will apply.

This function does not allow you to set a higher speed than the usual maximum speed for the program.

3682

## Procedure for use

### Motor on after wash

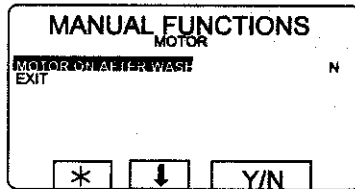

3683

Y/N

To access this function, see instructions in section "Manual mode".

A toggle function:  
Use Y/N to toggle the function from ON (Yes) to OFF (No).



When you have finished:  
Press ↓ to highlight "EXIT".

MOTOR ON AFTER WASH  
EXIT

SELECT


Press SELECT.

### Motor to rotate after program has ended

If you answer Yes (Y):

The motor will continue to rotate in alternative directions after the program has ended. This prevents creasing of the load.

When the program has ended, the display will look like this:

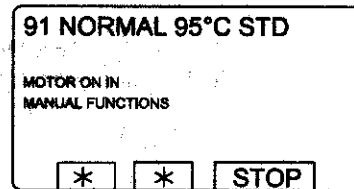


4111

Press STOP to stop the motor.




Detergent signals and water flushing

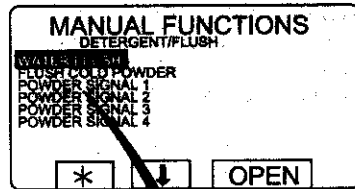

To access this function, see instructions in section "Manual mode".

 3684




Use ↓ and ↑ to select the function you require.


**Detergent signals and water flushing**

**FLUSH WATER:**  
This function uses water to clear detergent from the supply tubes of the detergent dispensing system.

**POWDER SIGNAL:**  
This function will either: a) use water to dispense detergent from machine compartments, or: b) dispense detergent from an external system. The number of valves present will vary according to the machine type.

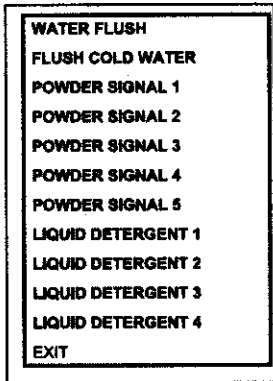

Press OPEN. The function will be activated for as long as you press and hold this key. The function ceases as soon as you release the key.

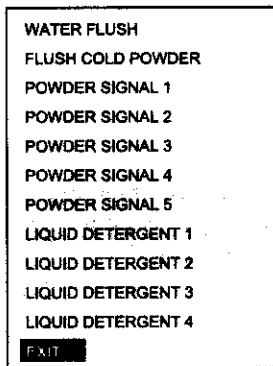


When you have finished: Press ↓ repeatedly to highlight "EXIT".

SELECT Press SELECT.

# Procedure for use


## Text

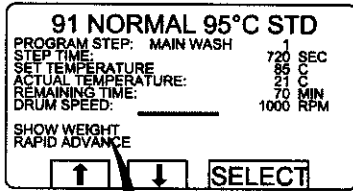

3582

During program operation the display will look like this (see section "To start the wash program").


**Pressing "Text" displays more information**  
 The text displayed is a description of the wash program selected. This text description is inserted when a new wash program is created. This procedure is described fully in the programming manual.

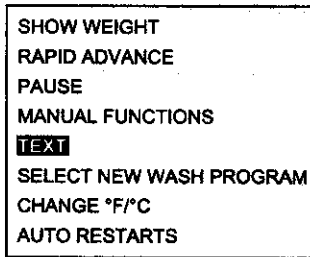

Press or one or more times to highlight "TEXT".



Press **SELECT**.

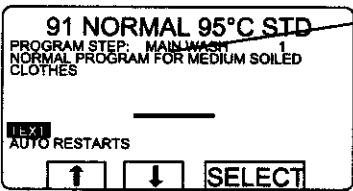

3630


Description of wash program




To return to the normal display: Press **SELECT** again.

**Automatic return to normal display**  
 If you do not press SELECT within 20 seconds, the display will revert automatically.

## To change the wash program after program operation has commenced

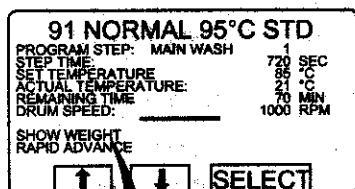

3694

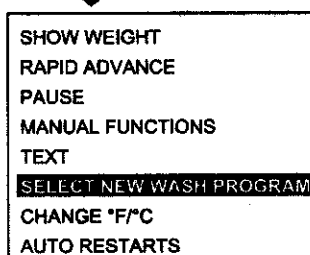

During program operation the display will look like this (see section "To start the wash program").

### To change the wash program after program operation has commenced

You can change to a different wash program at any time during program operation. When you do, the current function (for example, rinse) will be interrupted. The new program will start immediately after that (from the beginning).


This function is useful, for example, if you discover that you have started the wrong program.



Press or one or more times to highlight "SELECT NEW WASH PROGRAM".




Press SELECT.

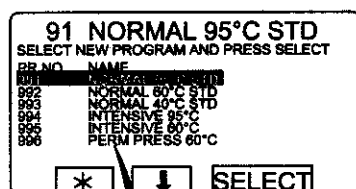

3695




Press one or more times as required...

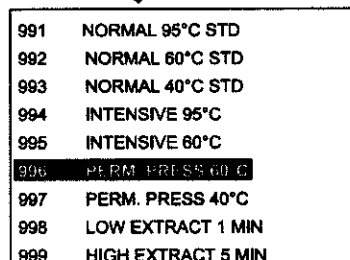

...to highlight the new wash program.



Press SELECT.

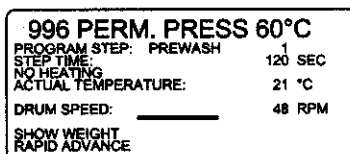

The existing wash program will now be interrupted and the new one will begin.

### Automatic return to normal display

If no key is pressed within 20 seconds, the display will revert automatically.

## Procedure for use

### To change temperature scale °C/°F

<b>91 NORMAL 95°C STD</b>	
PROGRAM STEP: MAIN WASH	1
STEP TIME:	720 SEC
SET TEMPERATURE:	85 °C
ACTUAL TEMPERATURE:	21 °C
REMAINING TIME:	70 MIN
DRUM SPEED:	1000 RPM
SHOW WEIGHT	
RAPID ADVANCE	
↑	↓
SELECT	

3696

SHOW WEIGHT
RAPID ADVANCE
PAUSE
MANUAL FUNCTIONS
TEXT
SELECT NEW WASH PROGRAM
<b>CHANGE F/C</b>
AUTO RESTARTS

During program operation the display will look like this (see section "To start the wash program").

**To change temperature scale °C/°F**  
 This function changes the temperature scale used for all temperatures displayed during the wash program.  
 Please note that this scale change applies only to the current program. The default temperature scale will apply next time you run a program.  
 To change the default temperature scale for all programs, use the function "SETTINGS", which is described in the Service Manual.




Press **↑** or **↓** one or more times to highlight "CHANGE °C/°F".




Press **SELECT**.

**Auto restart**

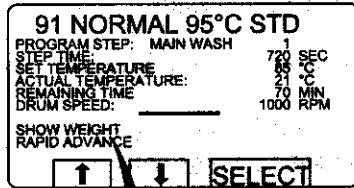

3593

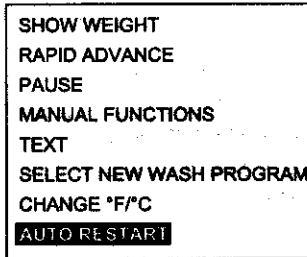


Press ↓ one or more times to highlight "AUTO RESTART".




**SELECT** Press SELECT.

**What is Auto restart?**  
 Auto restart means that the same program will be repeated one or more times, according to the number set. The program will restart immediately, and the door will remain locked. If you have set auto restart, the display will show the number of restarts left.  
 This function is used primarily for testing.

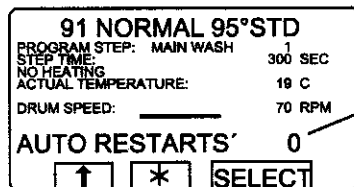

3594

Shows the number of times the program will restart.

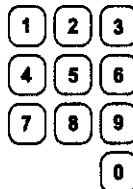


If required:  
 Use the numeric keys to change the required number of restarts.

**SELECT** Press SELECT.

## Manual operation

### To select manual operation

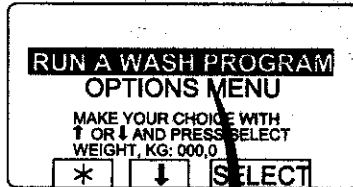

3589

If this menu is not currently displayed:  
Press repeatedly.



Press to highlight "GO TO THE MENU".

**SELECT**

Press SELECT.

#### *Two types of manual operation*

There are two types of manual operation, which should not be confused:

- **Manual operation when no program is running**  
These functions are described in this section.
- **Manual operation during a program**  
These functions are described in section "Manual operation"

#### *Always lock the door first!*


You must always close and lock the door first before you can operate the machine manually.

To lock the door, use the submenu MOTOR/DOOR, see section "Motor/door".



3685

Press six times...

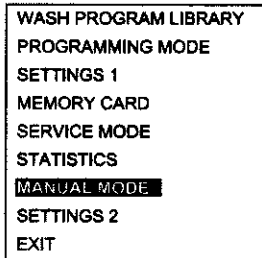

...to highlight "MANUAL MODE".


**SELECT**

Press SELECT.


#### *All manual settings are cancelled when you exit manual operation*

All manual settings (such as door, motor, temperature, and drain) will be cancelled when you exit manual operation.

The door is unlocked, the motor stops, the drain opens, heating is halted, and the temperature is reset to zero.

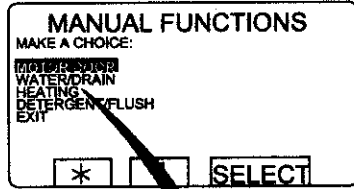

3688

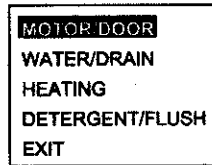

Select the **function** required using the cursor keys.



Press SELECT.

**Manual operation when no program is running**

**Motor/door (see section "Motor/door")**  
Lock/unlock door. Switch motor on/off (normal drum action).


**Water and drain valves (see section "Water/drain")**  
Operation of drain valve and all water valves.

**Heating (see section "Heating")**  
Heat water to any temperature required.

**Detergent valves (see section "Detergent signals and water flushing")**  
Allows manual operation of all valves in detergent compartment or external detergent supply system.

**Exit**  
Returns you to the MENU display.

**Motor/door**

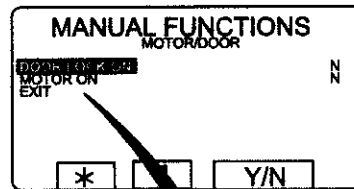

3687



 
Press **↓** as required to select a function.



A toggle function:  
Use Y/N to toggle the function from ON (Yes) to OFF (No).



When you have finished:  
Press **↓** to highlight "EXIT".



Press SELECT.

**Lock the door and start the motor**

**DOOR LOCK ON**  
If you answer Yes (Y):  
The door will be locked. Note that you must always lock the door before you can operate the machine manually.

**MOTOR ON**  
If you answer Yes (Y):  
The motor will start and operate, using normal action.

## Procedure for use

### Water/drain

MANUAL FUNCTIONS WATER/DRAIN N

DRAIN CLOSED

COLD WATER

MIXED WATER

HOT WATER

COLD HARD WATER

WATER FROM TANK 1

WATER FROM TANK 2

LEVEL: 0 UNITS

\* Y/N

3688



To access this function, see instructions in section "To select manual operation".

Use or to select Drain or one of the six Water filling alternatives.

DRAIN CLOSED

COLD WATER

MIXED WATER

HOT WATER

COLD HARD WATER

WATER FROM TANK 1

WATER FROM TANK 2

EXIT

Drain (a toggle function): Press Y/N to toggle the function from Yes (Y) and No (N).

Y/N

Water filling: Press OPEN. The function will be activated for as long as you press and hold this key. The function ceases as soon as you release the key.

OPEN



When you have finished: Press to highlight "EXIT".

DRAIN CLOSED

COLD WATER

MIXED WATER

HOT WATER

COLD HARD WATER

WATER FROM TANK 1

WATER FROM TANK 2

EXIT

SELECT

Press SELECT.



## Heating

**MANUAL FUNCTIONS**  
HEATING

SELECT SET TEMPERATURE  
0°C

ACTUAL TEMPERATURE  
24°C

\* \* START

To access this function, see instructions in section "To select manual operation".

Temperature selected

Actual temperature

3689

1 2 3  
4 5 6  
7 8 9  
0

Use the numeric keys to enter the temperature the water is to be heated to.

START

Press **START**.  
Heating will now begin.

STOP

If you wish, you can cancel heating before the set temperature is reached:  
**Access this function again and press STOP.**

# Procedure for use

## Detergent signals and water flushing

**MANUAL FUNCTIONS**  
DETERGENT/FLUSH

WATER FLUSH  
FLUSH COLD POWDER  
POWDER SIGNAL 1  
POWDER SIGNAL 2  
POWDER SIGNAL 3  
POWDER SIGNAL 4

\* ↓ OPEN

To access this function, see instructions in section "To select manual operation".

3684

↓  
↑

Use ↓ and ↑ to select the function you require.

**WATER FLUSH**

FLUSH COLD WATER  
POWDER SIGNAL 1  
POWDER SIGNAL 2  
POWDER SIGNAL 3  
POWDER SIGNAL 4  
POWDER SIGNAL 5  
LIQUID DETERGENT 1  
LIQUID DETERGENT 2  
LIQUID DETERGENT 3  
LIQUID DETERGENT 4  
EXIT

**Detergent signals and water flushing**

**FLUSH WATER:**  
This function uses water to clear detergent from the supply tubes of the detergent dispensing system.

**POWDER SIGNAL:**  
This function will either: a) use water to dispense detergent from machine compartments, or: b) dispense detergent from an external system. The number of valves present will vary according to the machine type.

**OPEN**  
↓

Press **OPEN**.  
The function will be activated for as long as you press and hold this key. The function ceases as soon as you release the key.

WATER FLUSH  
FLUSH COLD POWDER  
POWDER SIGNAL 1  
POWDER SIGNAL 2  
POWDER SIGNAL 3  
POWDER SIGNAL 4  
POWDER SIGNAL 5  
LIQUID DETERGENT 1  
LIQUID DETERGENT 2  
LIQUID DETERGENT 3  
LIQUID DETERGENT 4  
**EXIT**


When you have finished:  
Press ↓ repeatedly to highlight "EXIT".

**SELECT**

Press **SELECT**.

# Statistics

## To select Statistics

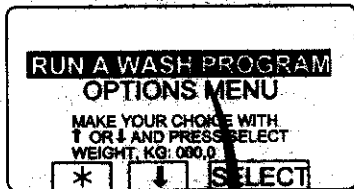

3589


If this menu is not currently displayed:  
Press repeatedly.



Press to highlight "GO TO THE MENU".




Press SELECT.

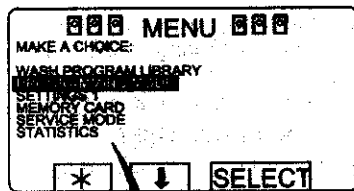

3691



Press five times...

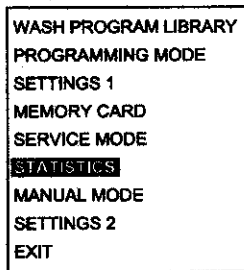

...to highlight "STATISTICS".



Press SELECT.

# Procedure for use

STATISTICS		
TOTAL RUN TIME HOURS		00000000
TOTAL TRIP RUN TIME HOURS		00000000
HOURS SINCE LAST SERVICE		00000000
LAST 5 ERROR CODES	PROGRAM	HOURS
08 NO HEATING	991	
08 NO HEATING	996	
08 NO HEATING	993	
08 NO HEATING	991	
08 NO HEATING	991	

3959



To display the next page of statistics:  
Press .

STATISTICS			
PROGRAM	WASHES	PROGRAM	WASHES
12	4	10	0
78	0	123	0
991	35	992	0
993	1	994	0
995	0	996	0
997	0	998	0
999	0		0

3958



To display the next page of statistics:  
Press .

STATISTICS			
PROGRAM	WASHES	PROGRAM	WASHES
1	0	2	0
5	0	6	0
99	0	991	0
S992	0	S993	0
S994	0	S995	0
S996	0	S997	0
S998	0	S999	0

4040

If a memory card is in place in the PCU, the memory card program statistics will be displayed. An "S" before the program number shows that it is a memory card program.



When you want to cancel the display of statistics:  
Press **EXIT**.

### The Statistics function

The Statistics function gives you access to the following information:

#### TOTAL RUN TIME HOURS:

Shows the total operating time for the machine since it was installed.

#### TOTAL TRIP RUN TIME HOURS:

This register records the total number of operating hours since it was last reset. It can, for example, be used to keep track of operating time since the last machine service. The procedure for resetting it is described in section "To reset "Total trip run time hours" to zero".

#### HOURS SINCE LAST SERVICE

This register shows the time elapsed since the last service. The register can also be used to generate a signal on the display to show when service is needed (see the section "Settings 1" in the service manual).


#### LAST 5 ERROR CODES:

This displays the most recent error codes, and tells which program was operating at the time and during which hour (according to the "total run time" record) the error code was flagged.

#### NO. OF TIMES EACH PROGRAM USED:

Displays statistics for PCU programs and for programs on any memory card currently in place in the PCU.

**Resetting statistic registers**

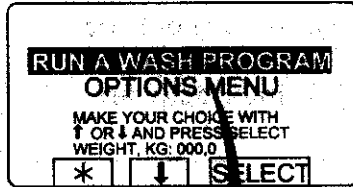

3589

If this menu is not currently displayed:

Press repeatedly.



Press to highlight "GO TO THE MENU".

RUN A WASH PROGRAM  
OPTIONS MENU




Press SELECT.

**Statistics registers which can be reset to zero**

The following registers in the statistics function can be cleared (reset to zero):

- Total trip run time hours.
- Hours since last service.
- No. of times each program used (PCU programs).
- No. of times each program used (programs on any memory card currently in the PCU).

# Procedure for use

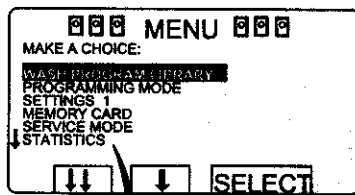


3683



Press ...four times....


**! !**  
 The service program may only be used by authorised personnel, because most safety interlocks are disabled.

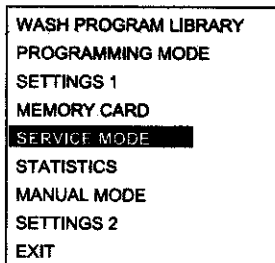

... to highlight "SERVICE PROGRAM".




Press SELECT

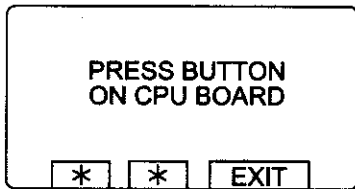

4209

Press the button on the CPU circuit board.

**Prevention of unauthorised access**  
 A button on the CPU circuit board has to be pressed to gain access to the service program, to prevent its unauthorised or inadvertent use. The CPU circuit board is located behind the control panel.

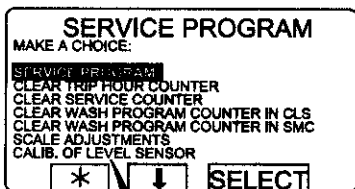

4042 A


Now you can choose either to clear/reset a register or to adjust the weighing equipment.



Press to highlight the option you want, then press SELECT.




If you want to exit:  
 Press repeatedly until EXIT is highlighted.

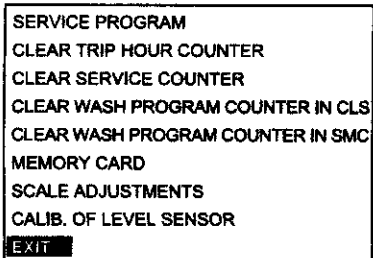


Press SELECT.

## Time counter, hours after last service

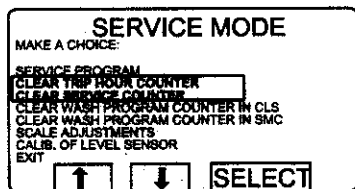


4041 A

Both counters can be reset in the same way.

Press  so that **CLEAR TRIP HOUR COUNTER OR CLEAR SERVICE COUNTER** will be marked.

Press **SELECT**.

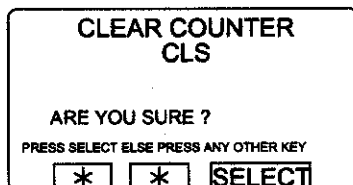

4043 A

First you have a chance to change your mind.

If you do not want to reset the register:


Press any key other than SELECT.

If you want to reset the register:  
Press **SELECT**.



# Procedure for use

## Number of washes for program in timer or memory card

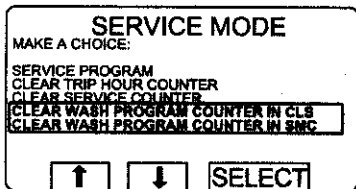

4044 A




You can reset program in both timer and the memory card (if inserted).


Press ↓ so that **CLEAR WASH PROGRAM COUNTER IN CLS** or **CLEAR WASH PROGRAM COUNTER IN SMC** will be marked.



Press **SELECT**.

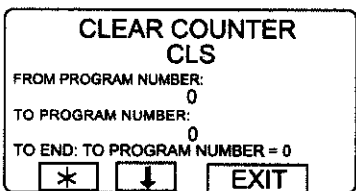

4045 A

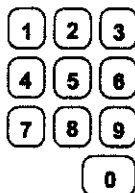

Write from which program number you want to clear wash programs.



Press ↓.



**CLEAR COUNTER  
CLS**  
FROM PROGRAM NUMBER: 1  
TO PROGRAM NUMBER: 0  
TO END: TO PROGRAM NUMBER = 0  
\* ↓ EXIT

4048 A

1 2 3  
4 5 6  
7 8 9  
0

Enter digits corresponding to the program number (inclusive) up to which you wish to clear the total counter.

**ERASE**

Press **ERASE**.

**CLEAR COUNTER  
CLS**  
ARE YOU SURE ?  
PRESS SELECT ELSE PRESS ANY OTHER KEY  
\* \* SELECT

4043 A

First you have the chance to change your mind.

If you do not want to reset the register:

Press any key other than **SELECT**.

If you do want to reset the register:

**SELECT**

Press **SELECT**.

## Procedure for use

For machines with weighing equipment installed only!

### Scale adjustments

```

SERVICE PROGRAM
MAKE A CHOICE:
SERVICE PROGRAM
CLEAR COUNTER
CLEAR SERVICE COUNTER
CLEAR WASH COUNTER IN CLS
CLEAR WASH COUNTER IN MEMORY CARD
SCALE ADJUSTMENTS
↑ ↓ SELECT
  
```

4777 A



Press repeatedly until SCALE ADJUSTMENTS is highlighted.

SELECT

Press SELECT.



When you have finished: Press repeatedly until EXIT is highlighted.

```

SERVICE PROGRAM
CLEAR COUNTER
CLEAR SERVICE COUNTER
CLEAR WASH COUNTER IN CLS
CLEAR WASH COUNTER IN MEMORY CARD
SCALE ADJUSTMENTS
EXIT
  
```

SELECT

Press SELECT.

### Scale adjustments

The following functions are accessed via the SCALE ADJUSTMENTS menu:

**Reset scale to zero (see section "Reset scale to zero")**

Used to make the weighing equipment display 0 when the machine has no load in it.

**Reset tare to zero (see section "Reset tare to zero")**

Used to clear a stored tare parameter.

**Tare scale (see section "Tare scale")**

Used to reset the weighing equipment so that a weight such as a container will not be included when calculating net weight.

**Set tare to a certain value (see section "Set tare to a certain value")**

Used to enter a value for the tare parameter, a weight in hectograms.

**Read tare value (see section "Read tare value")**

Used to check the value currently stored as the tare parameter.

**Calibrate the scale (see section "Calibrate the scale")**

This function is used only on installation of a new scale unit.

**Zero calibration (see section "Zero calibration")**

Used to increase the accuracy of the weighing equipment.


**Read version number (see section "Read version number")**

This is where you find the version number of the weighing equipment.


If the weighing equipment is not connected, the error message "WEIGHING EQUIPMENT NOT CONNECTED" will be displayed. Connect the weighing equipment and try again. If necessary, see the section "Fault-finding, weighing equipment" in the machine manual.

For machines with weighing equipment installed only!

## Reset scale to zero

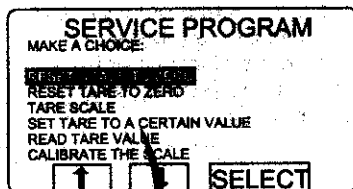

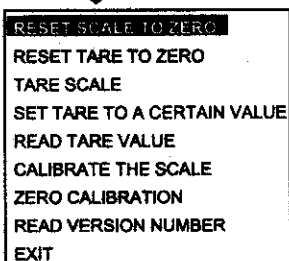

4778



Check that "RESET SCALE TO ZERO" is highlighted.




If it isn't...

Press  or  as required to highlight "RESET SCALE TO ZERO".



Press SELECT.

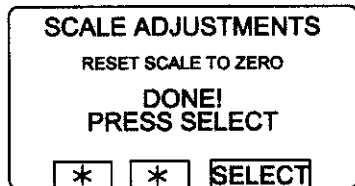

4779



This screen shows that the weighing equipment has been reset to zero.

Press SELECT.

### Reset scale to zero

"Reset weighing equipment" is used to make the weighing equipment display 0 when the machine has no load in it.

If your attempt to reset the weighing equipment fails at this point, you will see an error message equivalent to: "FAILED. PRESS SELECT" on the display. For troubleshooting, see the section "Fault-finding, weighing equipment" in the machine manual.

#### Please note:

The machine must be unladen when you use this function, i.e. no water or wash load in the drum.

#### Please note:

After a power-cut, the weighing equipment will always display 0, no matter what the actual load in the drum. In this event you will have to use the "Reset scale to zero" function.

## Procedure for use

For machines with weighing equipment installed only!

### Reset tare to zero

**SERVICE PROGRAM**  
MAKE A CHOICE:

RESET SCALE TO ZERO  
 RESET TARE TO ZERO  
 TARE SCALE  
 SET TARE TO A CERTAIN VALUE  
 READ TARE VALUE  
 CALIBRATE THE SCALE

↑ ↓ SELECT

4780



Press ↓ once to highlight "RESET TARE TO ZERO".

RESET SCALE TO ZERO  
 RESET TARE TO ZERO  
 TARE SCALE  
 SET TARE TO A CERTAIN VALUE  
 READ TARE VALUE  
 CALIBRATE THE SCALE  
 ZERO CALIBRATION  
 READ VERSION NUMBER  
 EXIT

SELECT

Press SELECT.

**Reset tare to zero**

If your attempt to clear the tare parameter fails at this point, you will see an error message equivalent to: "FAILED. PRESS SELECT" on the display. For troubleshooting, see the section "Fault-finding, weighing equipment" in the machine manual.

**SCALE ADJUSTMENTS**

RESET TARE TO ZERO

DONE!  
PRESS SELECT

\* \* SELECT

4781


SELECT

Press SELECT.

This screen shows that the stored tare parameter has been cleared.

For machines with weighing equipment installed only!


## Tare scale

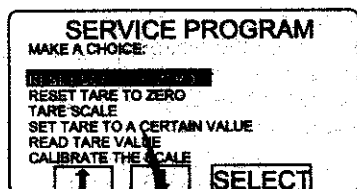

4782



Press twice to highlight "TARE SCALE".

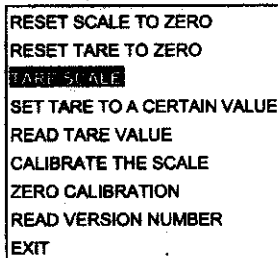


Press SELECT.

**Tare scale**

This function involves first loading the drum with, for example, a container, then taring (resetting) the weighing equipment so that the weight of the container will not be included when calculating net weight.

If your attempt to tare the weighing equipment fails at this point, you will see an error message equivalent to: "FAILED. PRESS SELECT" on the display. For troubleshooting, see the section "Fault-finding, weighing equipment" in the machine manual.

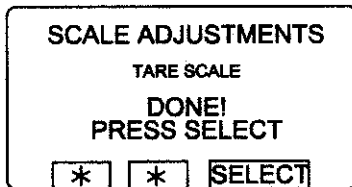

4783




Press SELECT.

This screen shows that the weighing equipment has been tared successfully.

# Procedure for use

For machines with weighing equipment installed only!

## Set tare to a certain value

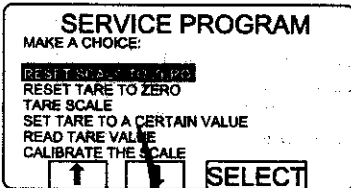

4784




Press **↓** three times to highlight "SET TARE TO A CERTAIN VALUE"


**Set tare to a certain value**

This function lets you enter a value for the tare parameter, i.e. a weight value which the weighing equipment will disregard when showing a net weight on the display. The function will automatically clear any earlier tare value when you enter a new one.

If your value is not entered successfully at this point, you will see an error message equivalent to: "FAILED. PRESS SELECT" on the display. For troubleshooting, see the section "Fault-finding, weighing equipment" in the machine manual.

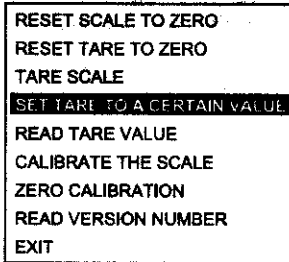

Press SELECT.

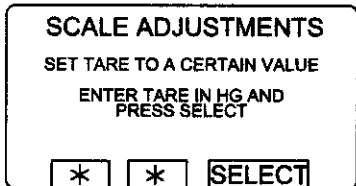


4785



Use the numeric keys to enter the tare you require, unit: hectograms; 1 hectogram = 100 grams).



Press SELECT.

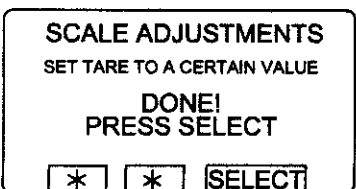

4786




Press SELECT.

This screen shows that the parameter has been entered successfully.

For machines with weighing equipment installed only!


## Read tare value

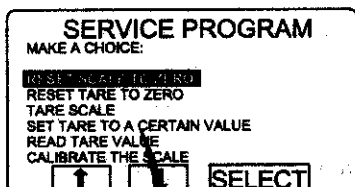


4787



Press **↓** four times to highlight "READ TARE VALUE".

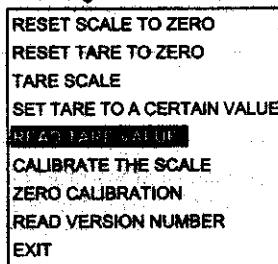

Press **SELECT**.

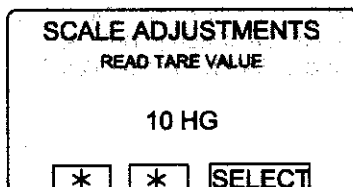

4788



Press **SELECT**.


**Read tare value**  
This function lets you check the value currently stored as the tare parameter.

This screen shows the stored tare parameter (unit: hectograms (1 hectogram = 100 grams)).

# Procedure for use

For machines with weighing equipment installed only!


## Calibrate the scale

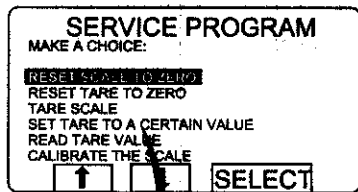


4789



Press five times to highlight "CALIBRATE THE SCALE".

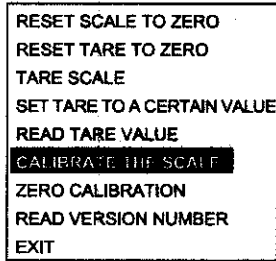


Press SELECT.

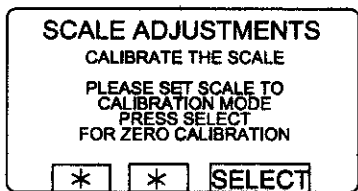

4790



Press SELECT.

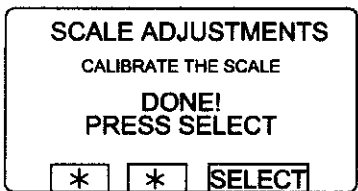

4791



Press SELECT.

**Please note:**

This function is used only on installation of a new scale unit.

**Calibrate the scale**


If this calibration has not succeeded you will see an error message equivalent to: "FAILED. PRESS SELECT" on the display. For troubleshooting, see the section "Fault-finding, weighing equipment" in the machine manual.

**Please note:**

The machine must be unladen at the start of calibration, i.e. no water or wash load in the drum.

**Calibration mode/normal mode**

To gain access to the calibration switch in the scale unit, the top panel has to be taken off. Remove the four screws on the scale unit cover. Then the calibration switch can be switched between normal mode "ON" and calibration mode "CAL".

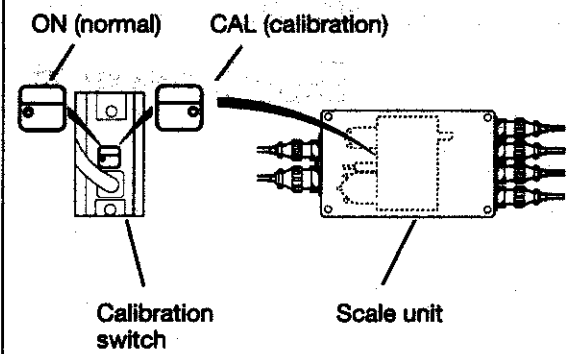

4758 A



# Procedure for use

For machines with weighing equipment installed only!

**SCALE ADJUSTMENTS**  
CALIBRATE THE SCALE  
FILL DRUM WITH CALIBRATION WEIGHT  
ENTER WEIGHT IN HG AND  
PRESS SELECT

\* \* SELECT

4792

1 2 3  
4 5 6  
7 8 9  
0

Use the numeric keys to enter the calibration weight in hg (1 hg = 100 grams).

Put the calibration weight in the drum.

### Calibration weight

A weight of between 40 kg and 400 kg should be used as a calibration weight.  
The higher the weight (within these limits), the better the weighing accuracy of the machine.

SELECT

Press SELECT.

**SCALE ADJUSTMENTS**  
CALIBRATE THE SCALE  
DONE!  
PRESS SELECT

\* \* SELECT

4791

SELECT

Press SELECT.

**SCALE ADJUSTMENTS**  
CALIBRATE THE SCALE  
REMOVE WEIGHT AND PRESS SELECT

\* \* SELECT

4793

SELECT

Press SELECT.

Remove the calibration weight.

**SCALE ADJUSTMENTS**  
CALIBRATE THE SCALE  
PRESS SELECT FOR ZERO CALIBRATION

\* \* SELECT

4794


SELECT

Press SELECT.

If you want to use the "Calibrate zero" function now:

# Procedure for use


For machines with weighing equipment installed only!

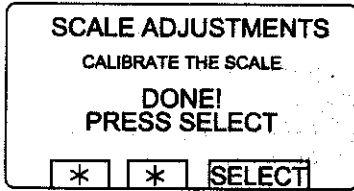

4781

**SELECT**

Press **SELECT**.

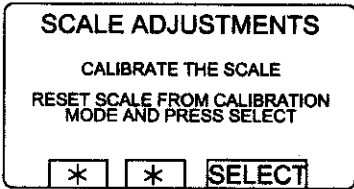


4795

**SELECT**

Press **SELECT**.


Restore the calibration switch to normal mode.

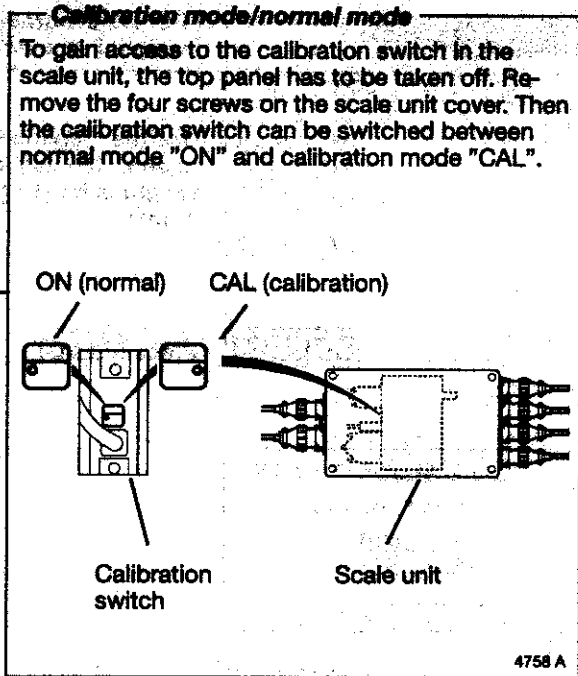


# Procedure for use

For machines with weighing equipment installed only!

## Zero calibration

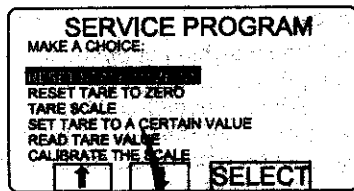


Press six times to highlight "ZERO CALIBRATION".

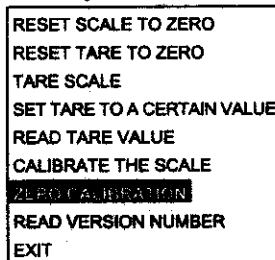

Press SELECT.

**Zero calibration**  
The "Zero calibration" function is used to increase the accuracy of the weighing equipment. This should be done once a month.  
If this calibration has not succeeded you will see an error message equivalent to: "FAILED. PRESS SELECT" on the display.  
For troubleshooting, see the section "Fault-finding, weighing equipment" in the machine manual.


**Please note:**  
The machine must be unladen during this calibration, i.e. no water or wash load in the drum.

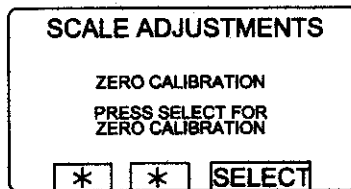

If you wish to calibrate zero for the weighing equipment:



Press SELECT.

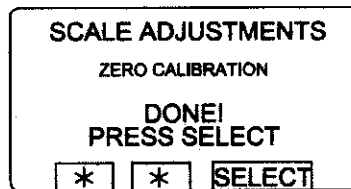

This screen shows you have calibrated zero.



Press SELECT.

# Procedure for use

For machines with weighing equipment installed only!

## Read version number

**SERVICE PROGRAM**  
MAKE A CHOICE:

- RESET SCALE TO ZERO
- RESET TARE TO ZERO
- TARE SCALE
- SET TARE TO A CERTAIN VALUE
- READ TARE VALUE
- CALIBRATE THE SCALE

↑   ↓   **SELECT**

4799



Press ↓ seven times to highlight "READ VERSION NUMBER".

**Read version number**

In the event of a fault in the weighing equipment (which cannot be put right with the aid of the section "Fault-finding, weighing equipment" in the machine manual), make a note of the version number accessed via this function before you contact the supplier's service department.

- RESET SCALE TO ZERO
- RESET TARE TO ZERO
- TARE SCALE
- SET TARE TO A CERTAIN VALUE
- READ TARE VALUE
- CALIBRATE THE SCALE
- ZERO CALIBRATION
- READ VERSION NUMBER**
- EXIT

**SELECT**

Press **SELECT**.

**SCALE ADJUSTMENTS**

- READ VERSION NUMBER
- STATHMOS AB 3050 REV 00521

\*   \*   **SELECT**

4800


The screen shows the version number.

**SELECT**

Press **SELECT**.

## Memory card

### General introduction

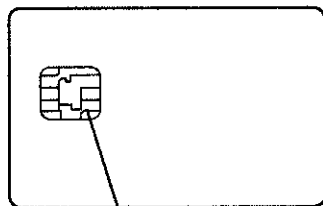

3805

Memory chip

A memory card is a plastic card, the size of a credit card, with an electronic memory chip inside it. This memory card is capable of storing 10 to 15 wash programs of normal size. If the programs are mostly small ones, more of them can be stored, whereas larger programs will reduce the number which can be held by the memory card. Memory cards of this type can be used to:


- transfer wash programs from one machine to another
- run wash programs straight from the memory card
- transfer wash programs from a PC to a memory card and from a memory card to a PC (these procedures, and how to write a wash program on a PC, are described elsewhere)

A program stored on a memory card may be given restricted-use status. This means that:


- The program cannot be deleted or copied to the program control unit of a washer extractor.
- You cannot alter the program or inspect the way it is written.
- To run the program you have to have the memory card and to insert it into the program control unit when the program is to be started.

# Procedure for use


## To select the "Memory card" function

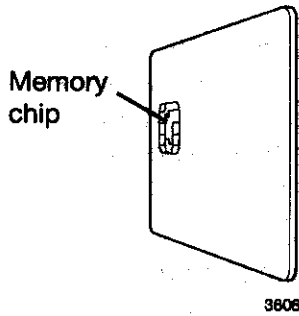

Turn the memory card so its memory chip is at the far end, and on the left of the card...

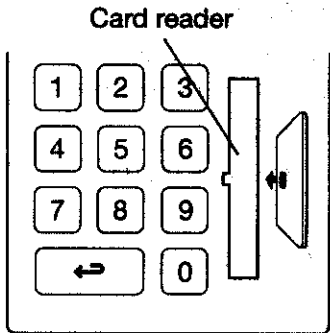

...then insert the memory card into the program control unit.

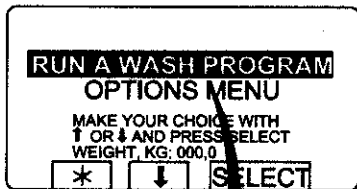

If this menu is not currently displayed:  
Press repeatedly.




Press to highlight "GO TO THE MENU".

RUN A WASH PROGRAM  
OPTIONS MENU




Press SELECT.

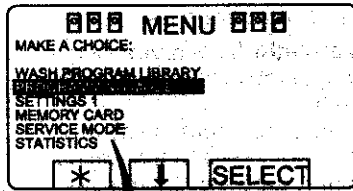

3598




Press  three times...

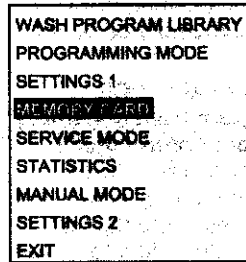

...to highlight "MEMORY CARD".

 Press SELECT.


## Procedure for use

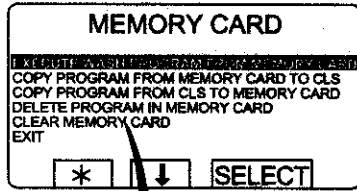

3597 A



 Select the **function** required using the cursor keys.



**SELECT**

Press **SELECT**.

### "The "Memory card" functions

**Run wash program straight from memory card (see section "To run a wash program straight from a memory card")**

A wash program can be run from the memory card, without first being copied to the washer extractor. The memory card may be removed from the card reader after the program has started.

Programs on memory cards may have "restricted-use" status, which means that they can only be run straight from the memory card, not copied or modified.

**Copy program from memory card to PCS (see section "To copy a program from a memory card to the machine's program control unit")**

One or more wash programs can be copied from the memory card to the memory chip in the machine's program control unit. Note that programs on the memory card with "restricted-use" status cannot be copied to the machine memory chip.

**Copy program from PCS to memory card (see section "To copy a program from the program control unit to a memory card")**


One or more wash programs can be copied from the memory chip in the machine's program control unit to the memory card. The memory card can hold 10 to 15 wash programs of normal size.

**Delete program on memory card (see section "To delete a program on a memory card")**

**Clear memory card (see section "To delete all programs on a memory card")**



**To run a wash program straight from a memory card**

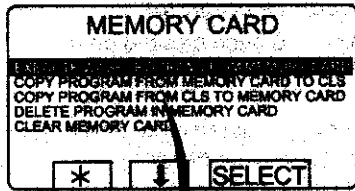

3588 A


To access this menu, follow the instructions in section "To select the "Memory card" function".

Highlight "EXECUTE WASH PROGRAM FROM MEMORY CARD" (press if necessary).




**SELECT**

Press **SELECT**.

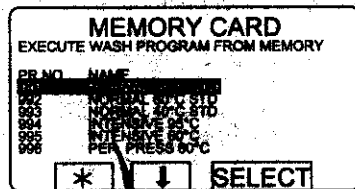

3607


If necessary, use to...

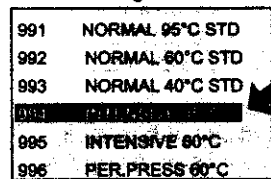

... highlight the wash program required.

**SELECT**

Press **SELECT**.

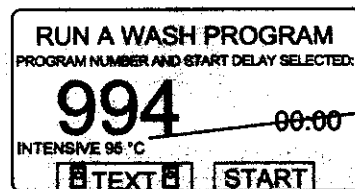

3608

Program name

**TEXT**

If you want to see the description of the program (where available): Press **TEXT**.


**START**

To start the program: Press **START**.  
Once the program has started, the memory card may be removed from the card reader.

**To run a program from the memory card**

In broad terms, the program control unit has two different memories. One is a "program memory" where all its wash programs are stored, the other is an "operating memory", which is used to hold the program currently in use. The program control unit takes the instructions it needs to run the program from the operating memory.

When a wash program is started, the correct program is retrieved from the program memory and copied into the operating memory.

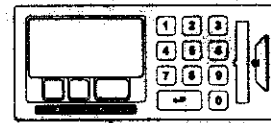

3617

Program memory program control unit

 
- 991 NORMAL 95°C STD
- 992 NORMAL 60°C STD
- 993 NORMAL 40°C STD
- 994 INTENSIVE 95°C
- 995 INTENSIVE 60°C
- 996 PERM. PRESS 60°C
- 997 PERM. PRESS 40°C
- 998 LOW EXTRACT 1 MIN
- 999 HIGH EXTRACT 5 MIN

Operating memory program control unit

- 997 PERM. PRESS 40°C

Program currently being used

A parallel process takes place when a program is started from a memory card. In other words, the program is copied from the memory card into the operating memory, and the machine runs the program entirely from the set of instructions in the operating memory.



3618

Program memory card

- 1 MY OWN 40 °C
- 2 MY OWN 60 °C
- 3 MY OWN 90 °C
- 4 MY OWN INTENSIVE
- 5 MY OWN WOOL 30 °C

Program memory program control unit

- 991 NORMAL 95°C STD
- 992 NORMAL 60°C STD
- 993 NORMAL 40°C STD
- 994 INTENSIVE 95°
- 995 INTENSIVE 60°C
- 996 PERM. PRESS 60°C
- 997 PERM. PRESS 40°C
- 998 LOW EXTRACT 1 MIN
- 999 HIGH EXTRACT 5 MIN


Operating memory program control unit

- 4 MY OWN WOOL 30 °C


That is why you may remove the memory card from the card reader once the program has started. Once the program has ended it is erased from the operating memory.

## Procedure for use

### To copy a program from a memory card to the machine's program control unit

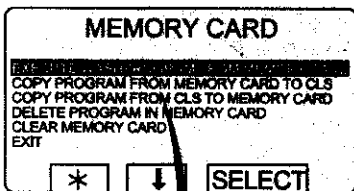

3609 A

 


**SELECT**

To access this menu, follow the instructions in section "To select the "Memory card" function".

Note that **restricted-use** programs on a memory card cannot be copied.

Highlight "COPY PROGRAM FROM MEMORY CARD TO CLS" (press **↓** or **↑** if necessary).


Press **SELECT**.

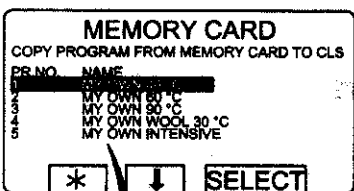

3810 A



If necessary, use **↓** to...

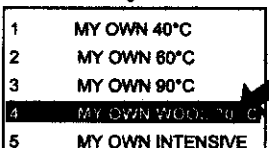

... highlight the wash program required.

**SELECT**

Press **SELECT**.

#### What is a restricted-use program?

A wash program which has been created on a PC can be made a "restricted-use" program. This means that:

- The program cannot be deleted or copied to the program memory of a washer extractor.
- You cannot modify the program or examine its structure.
- To run the program you must have access to the memory card, and insert it into the card reader when the program is to be started.

#### What happens when a program is copied?

Both the memory card and the program control unit have memory chips capable of storing wash programs. The chip on the card can hold about 10 to 15 programs of normal size, while the chip in the program control unit has a capacity of several hundred programs.



Program memory card

1	MY OWN 40 °C
2	MY OWN 60 °C
3	MY OWN 80 °C
4	MY OWN INTENSIVE



Program memory program control unit

991	NORMAL 65°C STD
992	NORMAL 60°C STD
993	NORMAL 40°C STD
994	INTENSIVE 95°
995	INTENSIVE 60°
996	PERM.PRESS 60°C
997	PERM.PRESS 40°C
998	LOW EXTRACT 1 MIN
999	HIGH EXTRACT 5 MIN

When a program is copied from a memory card to the machine's program control unit, it is copied, not moved (not deleted from the card). A copy is transferred from the chip on the memory card to the storage chip of the machine program control unit.

Program memory card

1	MY OWN 40 °C
2	MY OWN 60 °C
3	MY OWN 80 °C
4	MY OWN WOOL 30 °C
5	MY OWN INTENSIVE

Program memory program control unit

991	NORMAL 65°C STD
992	NORMAL 60°C STD
993	NORMAL 40°C STD
994	INTENSIVE 95°
995	INTENSIVE 60°
996	PERM.PRESS 60°C
997	PERM.PRESS 40°C
998	LOW EXTRACT 1 MIN
999	HIGH EXTRACT 5 MIN

The program remains on the memory card, but another copy of it has now been stored in the program control unit.

Program memory card

1	MY OWN 40 °C
2	MY OWN 60 °C
3	MY OWN 80 °C
4	MY OWN WOOL 30 °C
5	MY OWN INTENSIVE

Program memory program control unit

991	MY OWN WOOL 30 °C
992	NORMAL 65°C STD
993	NORMAL 60°C STD
994	NORMAL 40°C STD
995	INTENSIVE 95°
996	INTENSIVE 60°
997	PERM.PRESS 60°C
998	PERM.PRESS 40°C
999	LOW EXTRACT 1 MIN
999	HIGH EXTRACT 5 MIN

**MEMORY CARD**  
COPY PROGRAM FROM MEMORY CARD TO CLS  
NOW YOU CAN CHANGE NUMBER. 123  
JUST PRESS SELECT IF NUMBER IS OK

\* ↓ SELECT

3811 A

1 2 3  
4 5 6  
7 8 9  
0

SELECT

### Choose 1 or 2:

- 1 If you want to give the program a different program number (from the one it had on the memory card):

Use the numeric keys to enter the new program number, then press SELECT.

- 2 If the existing number is suitable:

Press SELECT.

**MEMORY CARD**  
COPY PROGRAM FROM MEMORY CARD TO CLS  
NOW YOU CAN CHANGE NUMBER 00  
PROG. NUMBER EXIST? OVERWRITE?  
PRESS SELECT OR ANY OTHER KEY

\* ↓ SELECT

4114 A

1 2 3  
4 5 6  
7 8 9  
0

SELECT

If the number you have chosen is already used:

- 1 Select another number.

Enter the new number and press SELECT.

- 2 Erase the old program number.

Press SELECT.

## Procedure for use

<b>MEMORY CARD</b>		
COPY PROGRAM FROM MEMORY CARD TO CLS		
PROGRAM LOADED		
PRESS ANY KEY TO CONTINUE...		
*	*	*

3612 A

After the program has been copied (it takes only a few seconds) the menu will look like this:

If you want to copy more programs:

Press any key to continue.

EXECUTE WASHPROGRAM FROM MEMORY CARD
COPY PROGRAM FROM MEMORY CARD TO CLS
COPY PROGRAM FROM CLS TO MEMORY CARD
DELETE PROGRAM IN MEMORY CARD
CLEAR MEMORY CARD
<b>EXIT</b>

4210 A


When you have finished:

Press **↓** repeatedly to highlight "EXIT".

**SELECT**

Press SELECT.


## To copy a program from the program control unit to a memory card

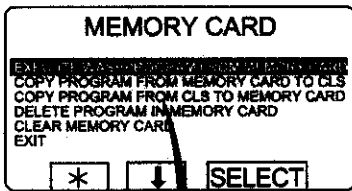

3618 A




 Highlight "COPY PROGRAM FROM CLS TO MEMORY CARD" (press or if necessary).



**SELECT**

Press SELECT.

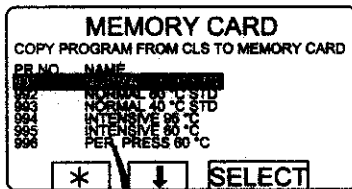


3620 A



If necessary, use to...

... highlight the wash program required.


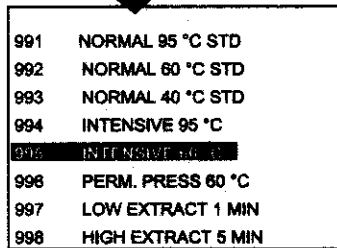


**SELECT**



Press SELECT.

### What happens when a program is copied?


 
Both the memory card and the program control unit have memory chips capable of storing wash programs. The chip on the memory card can hold about 10 to 15 programs of normal size, while the chip in the program control unit has a capacity of several hundred programs.

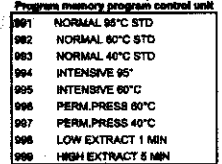

When a program is copied from the machine's program control unit to a memory card, it is copied, not moved (not deleted from the machine). A copy is transferred from the storage chip of the machine program control unit to the chip on the card.

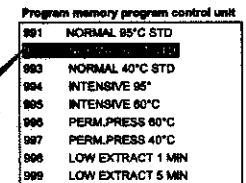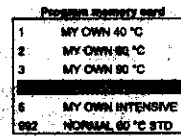

The program remains in the program control unit, but another copy of it has now been stored on the card.

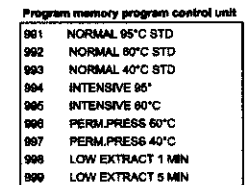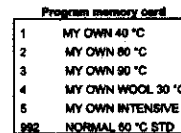

3622

## Procedure for use

**MEMORY CARD**  
 COPY PROGRAM FROM CLS TO MEMORY CARD  
 NOW YOU CAN CHANGE NUMBER. 006  
 JUST PRESS SELECT IF NUMBER IS OK

\* ↓ SELECT

3623 A

1 2 3  
 4 5 6  
 7 8 9  
 0

SELECT

### Choose 1 or 2:

1 If you want to give the program a different program number (from the one it had on the machine):

Use the numeric keys to enter the new program number, then press **SELECT**.

2 If the existing number is suitable:

Press **SELECT**.

**MEMORY CARD**  
 COPY PROGRAM FROM MEMORY CARD TO CLS  
 NOW YOU CAN CHANGE NUMBER 00  
 PROG. NUMBER EXIST? OVERWRITE?  
 PRESS SELECT OR ANY OTHER KEY

\* ↓ SELECT

4114 A

1 2 3  
 4 5 6  
 7 8 9  
 0

SELECT


If the number you have chosen is already used:

1 Select another number.

Enter the new number and press **SELECT**.

2 Erase the old program number.


Press **SELECT**.

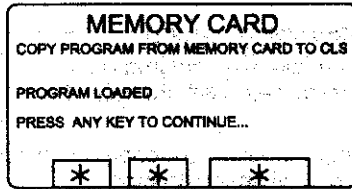

3612 A

After the program has been copied (it takes only a few seconds) the menu will look like this:

 If you want to copy more programs:  
Press any key to continue.



4210 A


When you have finished:

Press **↓** repeatedly to highlight "EXIT".

**SELECT**

Press SELECT.

## To delete a program on a memory card

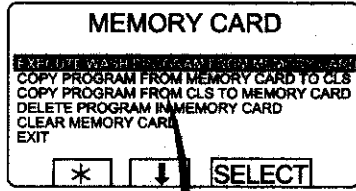

3625 A


To access this menu, follow the instructions in section "To select the "Memory card" function

**Note that restricted-use programs on a memory card cannot be deleted.**

 **Highlight "DELETE PROGRAM IN MEMORY CARD" (press  $\uparrow$  or  $\downarrow$  if necessary).**


**What is a restricted-use program?**  
 A wash program which has been created on a PC can be made a "restricted-use" program. This means that:

- The program cannot be deleted or copied to the program memory of a washer extractor.
- You cannot modify the program or examine its structure.
- To run the program you must have access to the memory card, and insert it into the card reader when the program is to be started.



**SELECT**


Press SELECT.

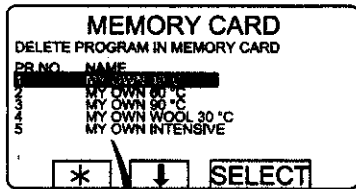

3626



If necessary, use  $\downarrow$  to...

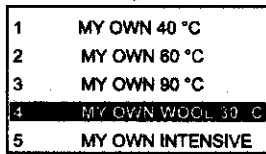

.... highlight the wash program required.


**SELECT**

 Press SELECT.

The program will now be deleted from the memory card. This takes between 5 and 15 seconds.

If you want to delete more programs:

**Continue in the same way as described above.**



4210 A

**SELECT**


When you have finished:

**Press  $\downarrow$  repeatedly to highlight "EXIT".**

Press SELECT.



To delete all programs on a memory card

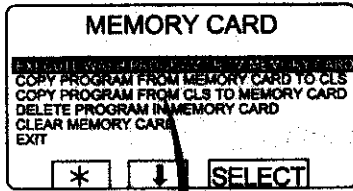

4519 A


Note that **restricted-use** programs on a memory card cannot be copied or deleted.

Highlight "CLEAR MEMORY CARD" (press **↓** or **↑** if necessary).

**What is a restricted-use program?**

 
A wash program which has been created on a PC can be made a "restricted-use" program. This means that:

- The program cannot be deleted or copied to the program memory of a washer extractor.
- You cannot modify the program or examine its structure.
- To run the program you must have access to the memory card, and insert it into the card reader when the program is to be started.



**SELECT**

Press **SELECT**.

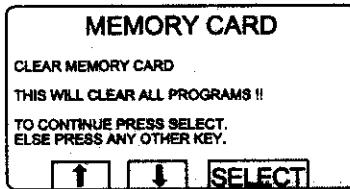

3629

If you change your mind and do not want to delete the entire memory card:

Press any key **other than SELECT**.

If you want to delete all programs on the memory card (with the exception of any restricted-use programs):

**SELECT**

Press **SELECT**.

**Maintenance****Daily**

- Clean the door seal and remove detergent residue.
- Check that the door does not leak.
- Clean the detergent compartment and wipe down the machine with a damp cloth.
- Check that the drain valve does not leak.
- Start the machine and check that the door remains locked while the machine is operating. Fast forward the machine to the stop position and check that the door cannot be opened until the program is completed.

**Every months**

- Check that valves, hoses and connections do not leak.
- Remove any textile lint from the drain opening, joints in drain pipes etc.

**Every third month**

Accumulated chemicals on the panel ledges.

- Disconnect electrical power from the machine.
- Turn off the water supply and bleed the pressure from the supply hoses.
- Remove the water supply hoses from the rear of the machine and clean or replace the inlet screens, as needed.
- Thoroughly clean the detergent dispenser.
- Remove the top and front panels from the machine.
- To help prevent corrosion, clean accumulation of detergent and other chemicals from the panels.
- Inspect inside of machine for leaks. Repair as needed.
- Clean the door gasket.
- Reinstall top and front panels.
- Restore power and return the machine to service.

To keep your machine in proper working order, follow the preventive maintenance recommendations provided below.

The maintenance interval should be adjusted according to machine usage. The suggested schedule assumes an 8 hour work day, and a 5 day work week..

### Daily

- Check the door and door lock:
  - Open the door and try starting the machine. The machine **MUST NOT START**.
  - Close the door, start the machine and try opening the door. It **MUST NOT BE POSSIBLE TO OPEN THE DOOR WHILE THE MACHINE IS OPERATING!**
  - Check that the door does not leak.
  - Clean the door seal, removing any detergent and fluff.
- Check that the drain valve does not leak during the wash cycle.
- Clean out any detergent remaining in the detergent compartment. Rapid advance through a program and let the water rinse the compartment.
- Inspect liquid chemical tubing and connections for leaks. Repair as necessary.

### Every third month (refer this service to qualified personnel)



- Check that the door does not leak.
- Check the drain valve and remove any lint.
- Inspect the interior of the machine (during an actual wash cycle to ensure that no leaks are noticed) by:
  - Turning of the main power switch of the machine.
  - Remove the top cover and the protective front and rear plates.
  - Cover the detergent dispenser to prevent water from splashing inside the machine.
  - Start a wash program.
  - **KEEP CLEAR OF MOVING PARTS WHILE MACHINE IS OPERATING!!**

## Preventive maintenance

---

- Inspect all internal hoses, seals and gaskets for signs of leakage. Repair as necessary.
- Check that water inlet screens are clean of debris. Dirty screens result in longer fill times, which reduce productivity.
- Inspect the drive belt. Adjust the tension or replace if necessary (see section 30. Motor).
- Check that there are no signs of leakage on the floor beneath the machine. Locate and repair any leak.
- On heated machines, if the heating time is unusually long, check the heating elements (see section 40. Heating). If the water is very hard, check whether there are lime deposits on the heating elements. Decalcify the elements if necessary. Adapt the amount of descaling agent to the manufacturer's guidelines.
- Never switch on the heating elements when there is no water in the machine. This will cause the slow-blow fuse to trigger.
- Inspect the shock absorbers and coil springs. (Only EX- and H-model).

# When reliable laundry and wetcleaning equipment is desired, the choice is Wascomat!

The world's oldest and leading manufacturer of commercial laundry equipment for coin laundries, hotels, motels, nursing homes and any other institutional laundry use, and the environmentally safe, wetcleaning "dual-use" systems for drycleaners.

## WASCOMAT PROVIDES "PEACE OF MIND GUARANTEE"

Backed by a company that's been in the laundry equipment business for over 100 years and has earned a reputation as the standard of quality worldwide, Wascomat dealers provide:

- Free survey of your laundry needs
- Laundry design and layout
- Quality laundry equipment in a size and model for every need
- Installation, start-up and training
- Worldwide parts and service
- Best warranty in the business
- **"Lease-a-Laundry Program"**, which includes the laundry equipment installation and ongoing service

## EXPAND, MODERNIZE, RETOOL OR BUILD A NEW LAUNDRY WITH LOW-COST FINANCING OR LEASING FROM WASCOMAT\*

With Wascomat/Viking financing or leasing you can obtain and install durable, efficient, state-of-the-art Wascomat washers, dryers and non-polluting, environmentally-friendly wetcleaning equipment to meet all anti-pollution regulations.

# Wascomat provides efficient, quality washers, dryers, flatwork ironers and non-polluting wetcleaning equipment.

## FRONT-LOAD WASHER MODELS

Solid and soft-mount, coin operated and commercial laundry washers in standard, high and ultra-high extract models. Designed for long life and efficient water and energy use. Available from 18 to 250 lb. capacities.

## SIDE-LOAD WASHER MODELS

Pullman, Side-Load, Barrier and Clean Room washer models with high 300 to 350 G-Force extraction, designed and built for long, trouble-free life and big water and energy savings. Available from 55 to 250 lb. capacities.

## GAS EFFICIENT DRYER MODELS

Coin operated and commercial energy and gas efficient, user friendly TD dryer models with optional unique Wascomat Residual Moisture Control (RMC). Available in a size and model for every laundry need.

## AUTOMATIC FLATWORK IRONERS

A unique one-operator, fully automatic, labor saving, ironer that does it all: feeds, irons, folds, stacks and counts. Also available in fully and semi-automatic models in a size and model for every laundry need.

FOR PARTS & CUSTOMER SERVICE YOU CAN DEPEND ON WASCOMAT & ITS DEALERS



## WASCOMAT NON-POLLUTING WETCLEAN EQUIPMENT

The best alternative to Perc, uses water and complies with OSHA, EPA and all other environmental, anti-pollution regulations. Wascomat state-of-the-art wetclean technology eliminates all pollution concerns and provides the best wetcleaning and washing results. Available in a size and model for every wetcleaning need.

With the push of a button, the unique Wascomat "Dual-Use" Wetcleaner converts to an ideal laundry washer for washing shirts, comforters, drapes, all other washable garments and cleaner's wash-dry-fold customer service.



**WASCOMAT PROVIDES THE BEST CUSTOMER SERVICE WITH EXPERIENCED WORLDWIDE CUSTOMER SUPPORT, WITH AN OVER 100-YEAR TRACK RECORD.**

**WASCOMAT/VIKING FINANCIAL SERVICES PROVIDES LOW COST FINANCING AND LEASING\* FOR YOUR BUSINESS GROWTH.**

For more information call Wascomat at 516-371-4400